

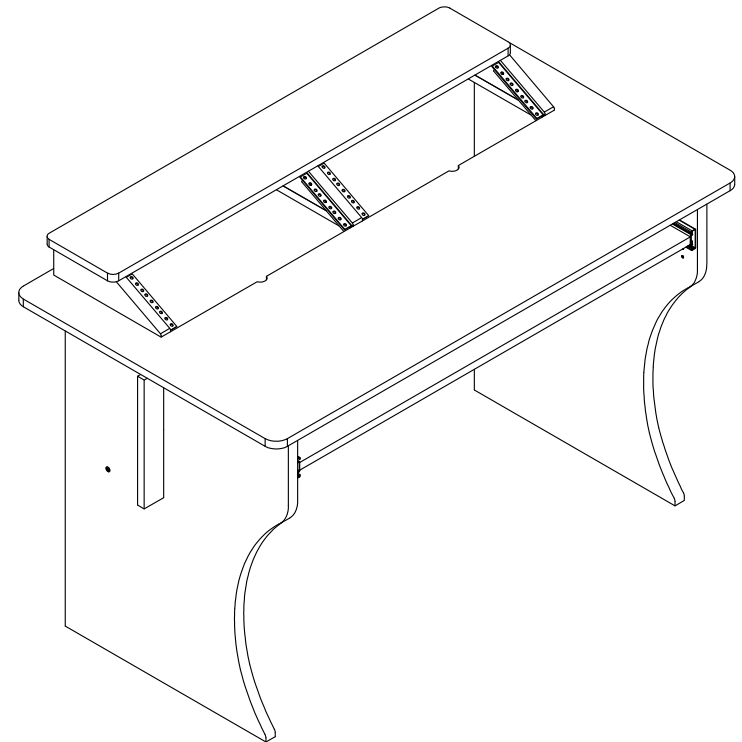


ComboDesk

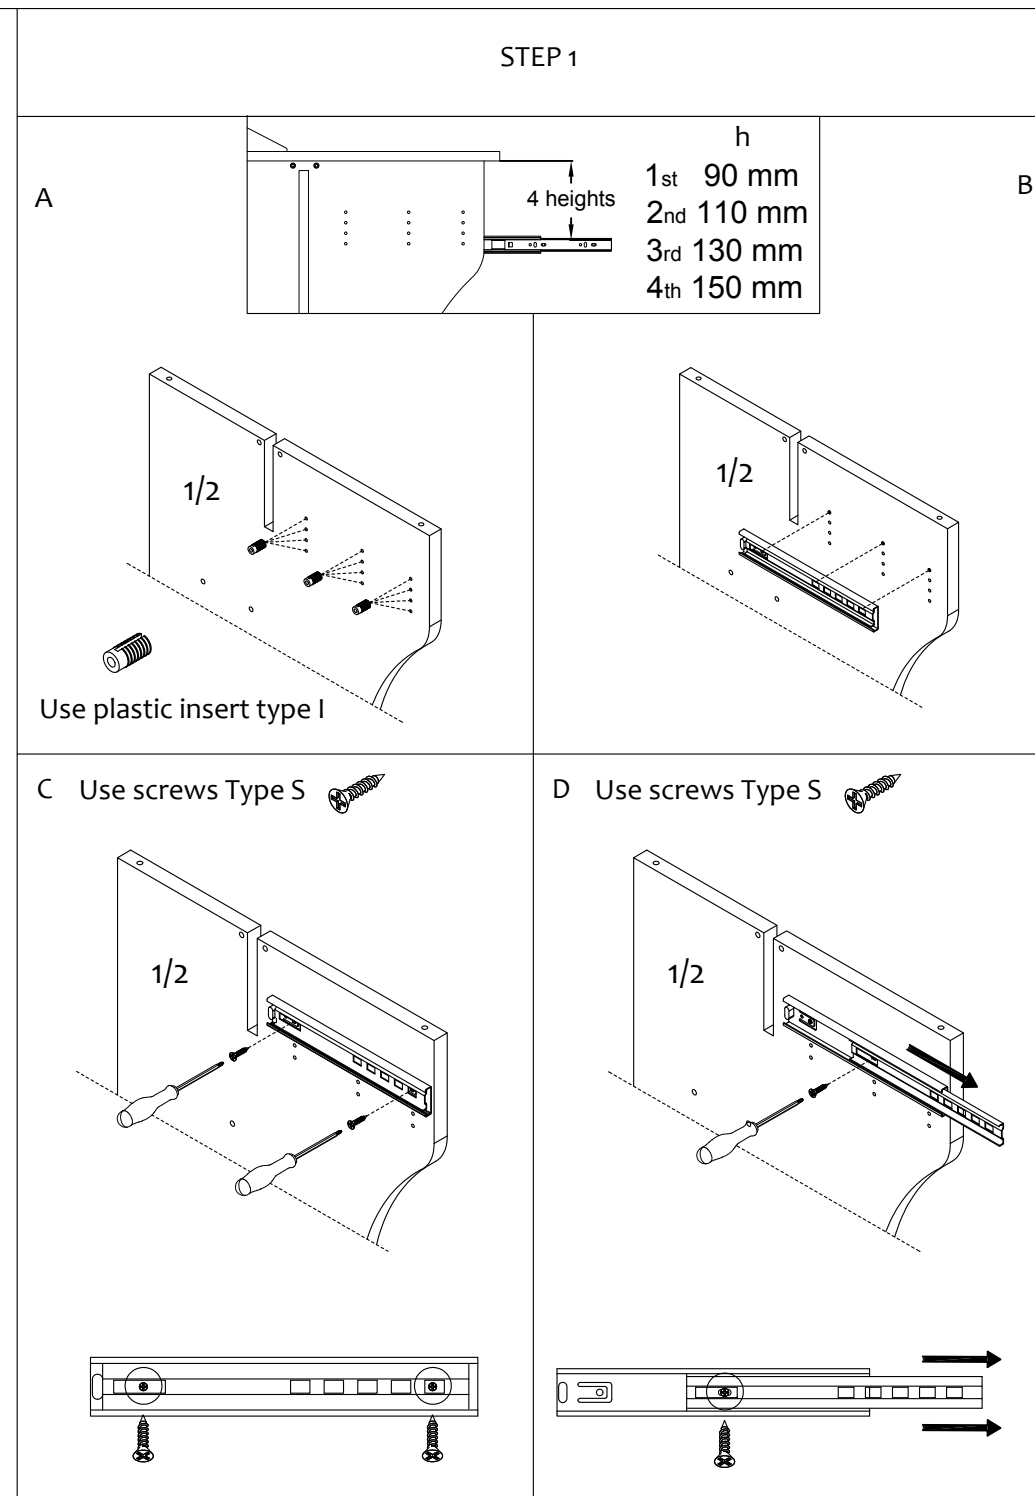


Combo 61 Desk

Assembly Manual

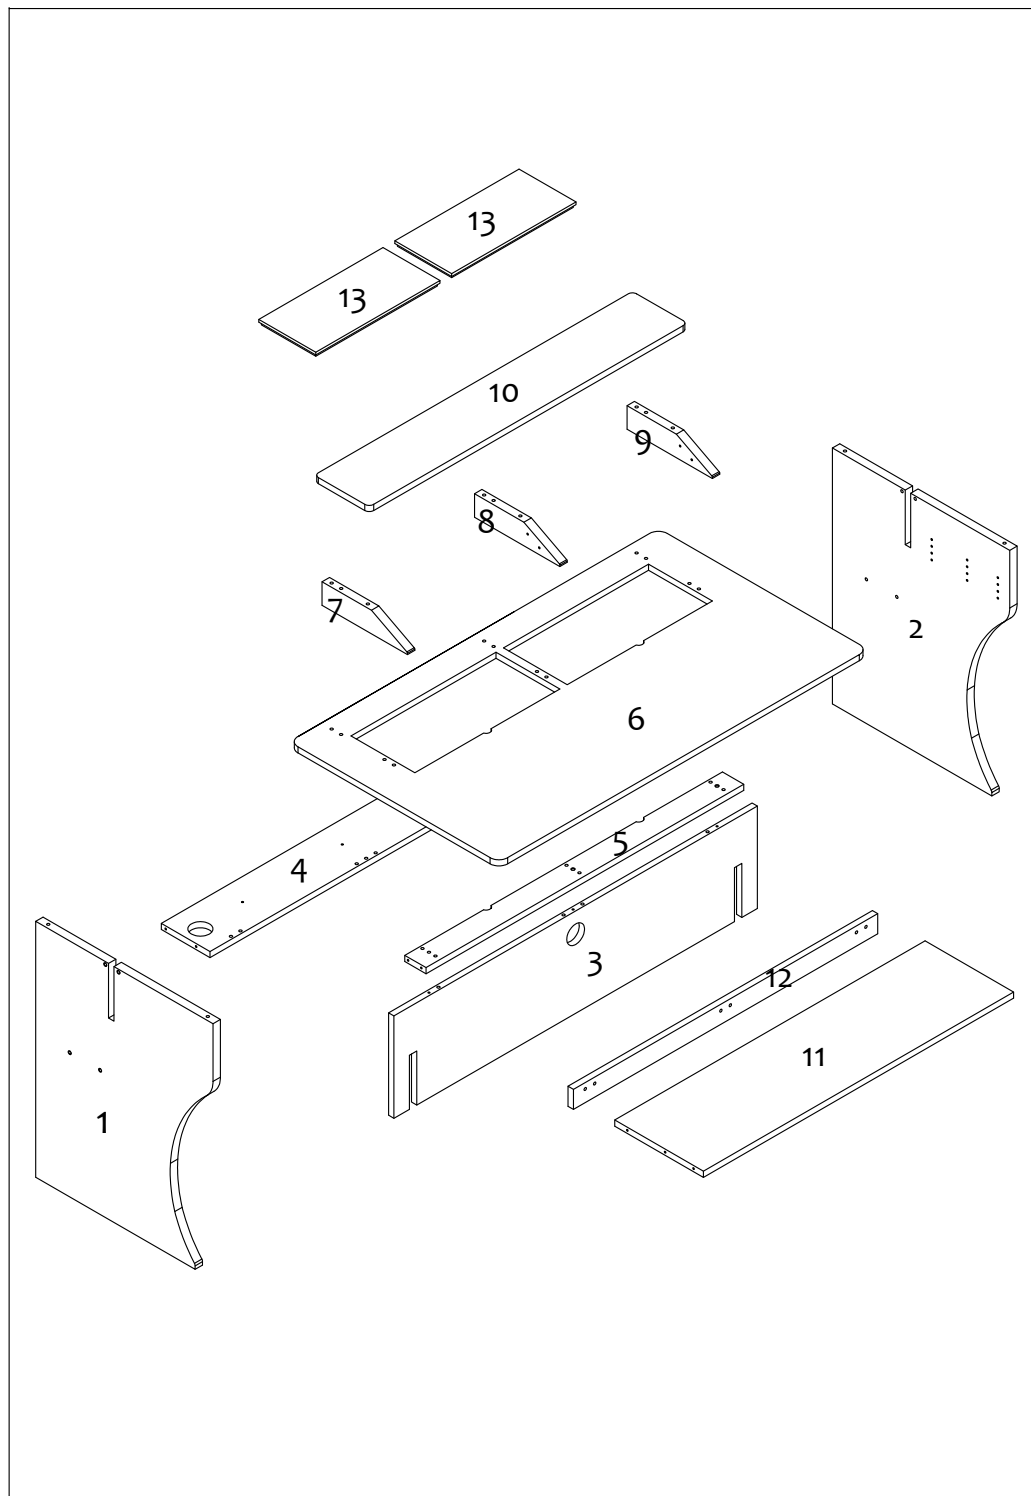


STEP 2


Push wooden dowels type W in the appropriate holes

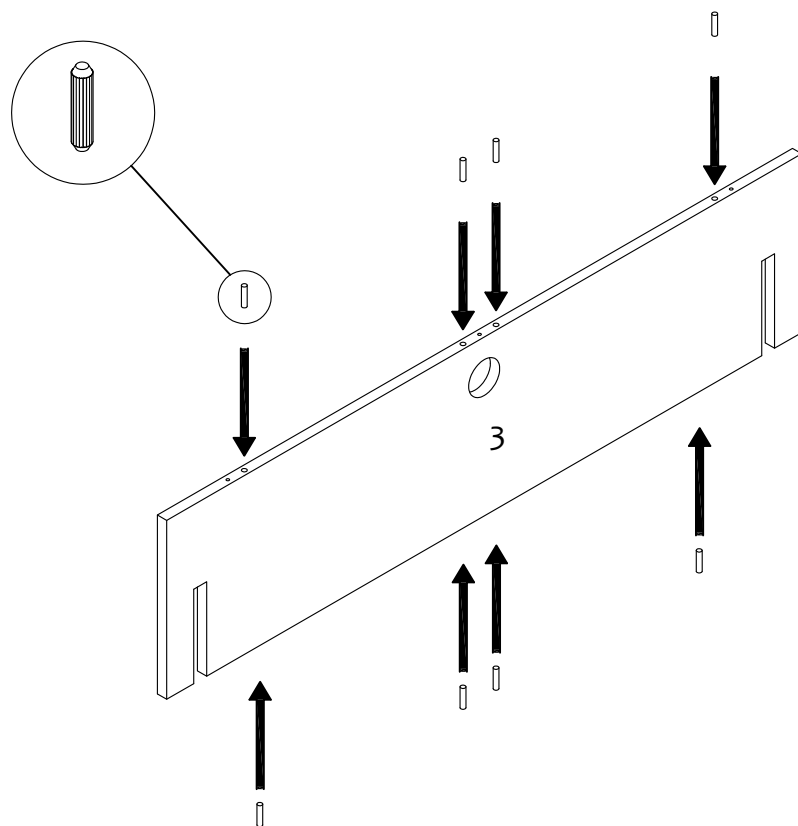

STEP 3

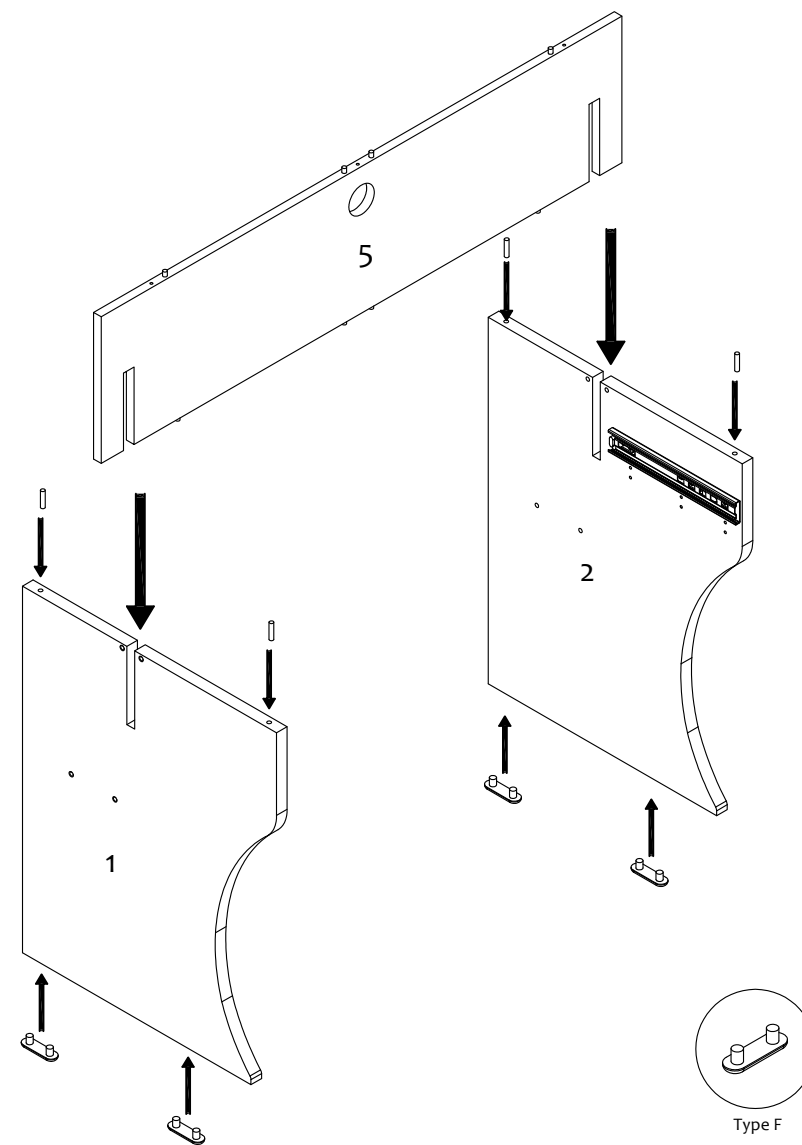


STEP 4

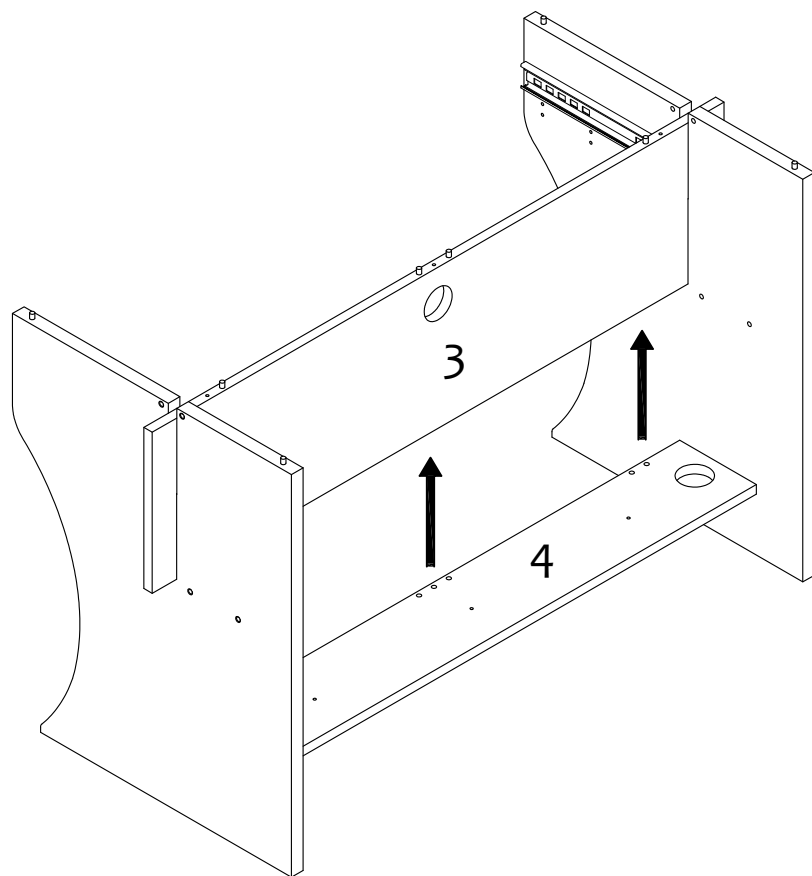


STEP 5


Use screws Type E 

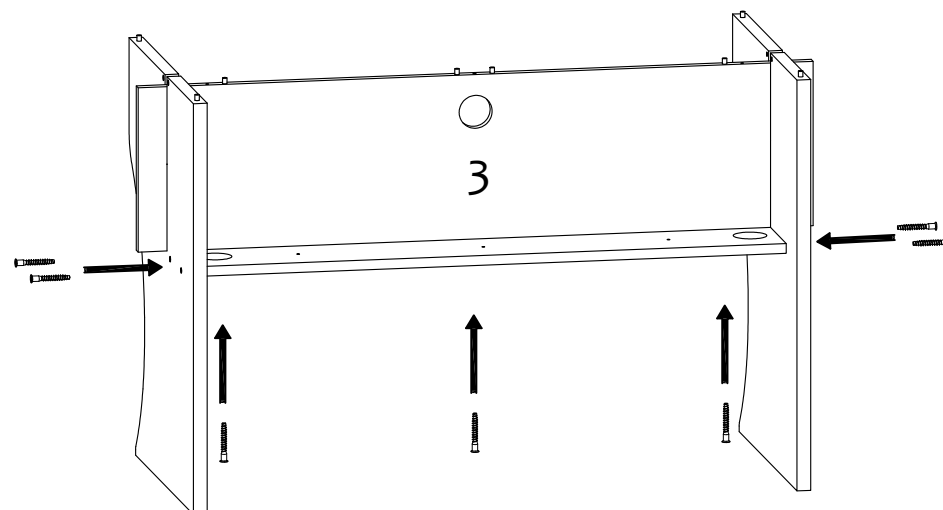


Use hex wrench to screw

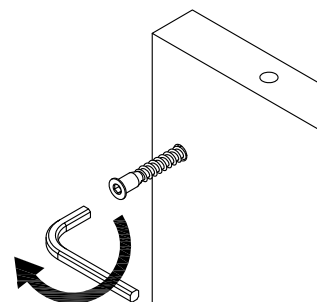


Tighten the screw until it is even with the particle board

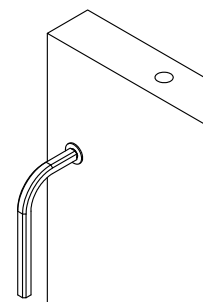

Use screws caps

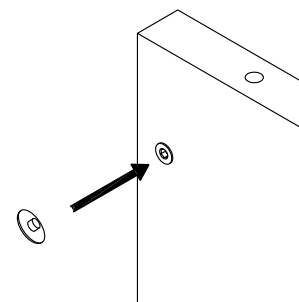


STEP 6

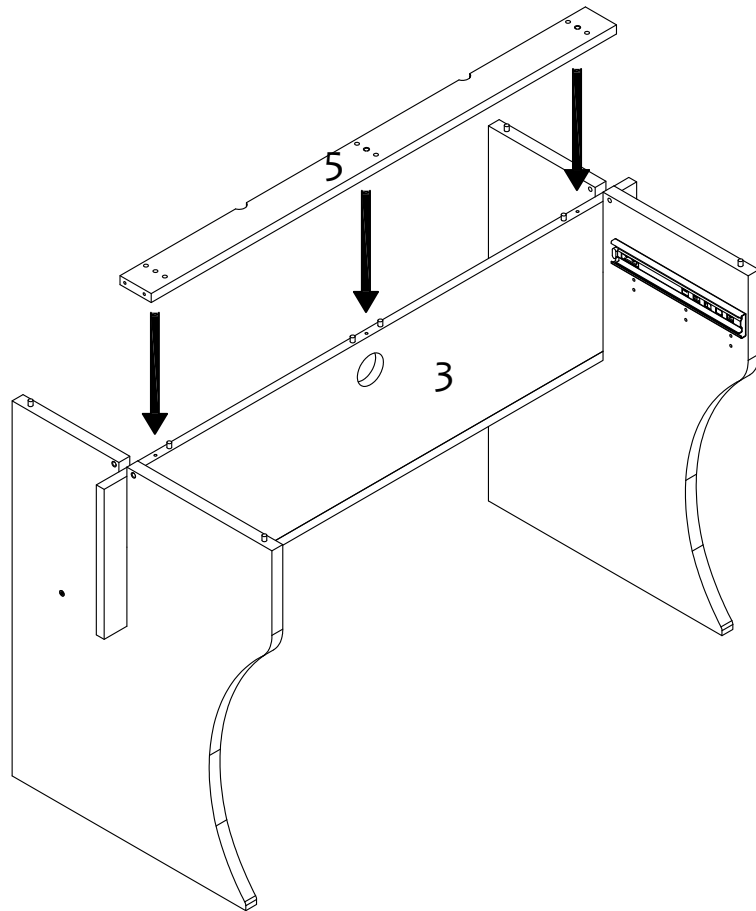


STEP 7

Use screws Type E 

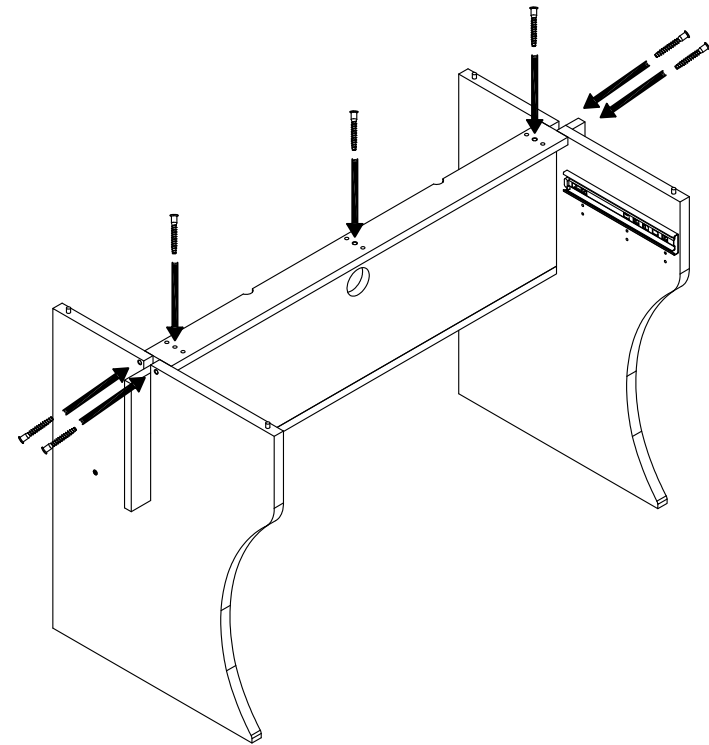


STEP 8

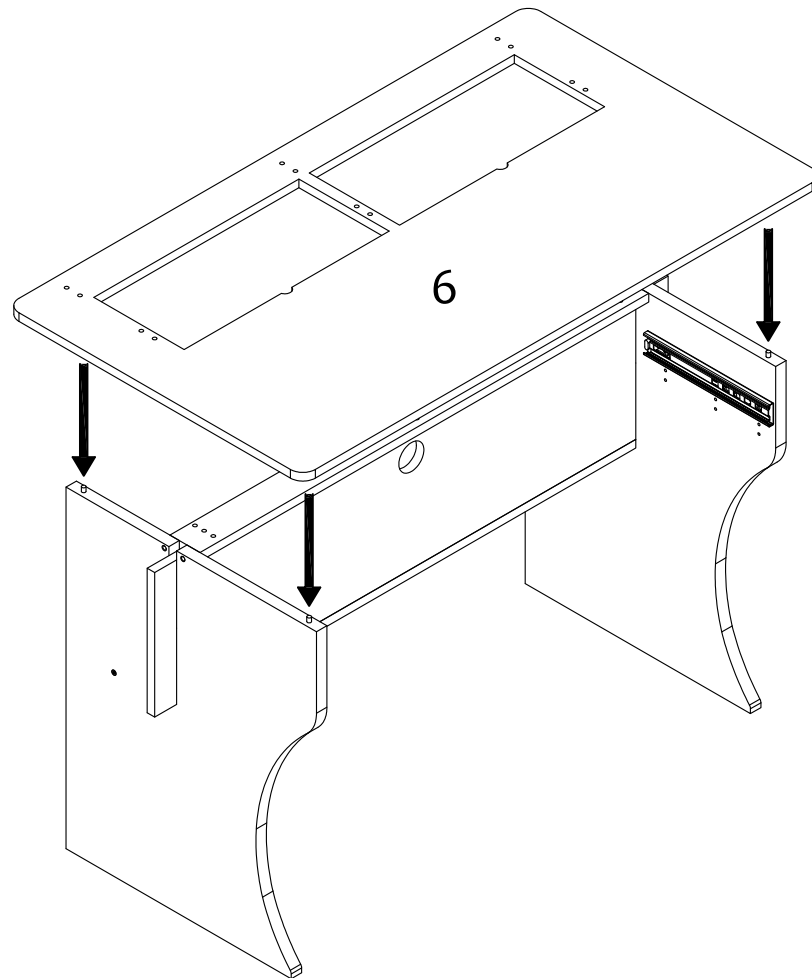


STEP 9


Use screws Type A (x6) 

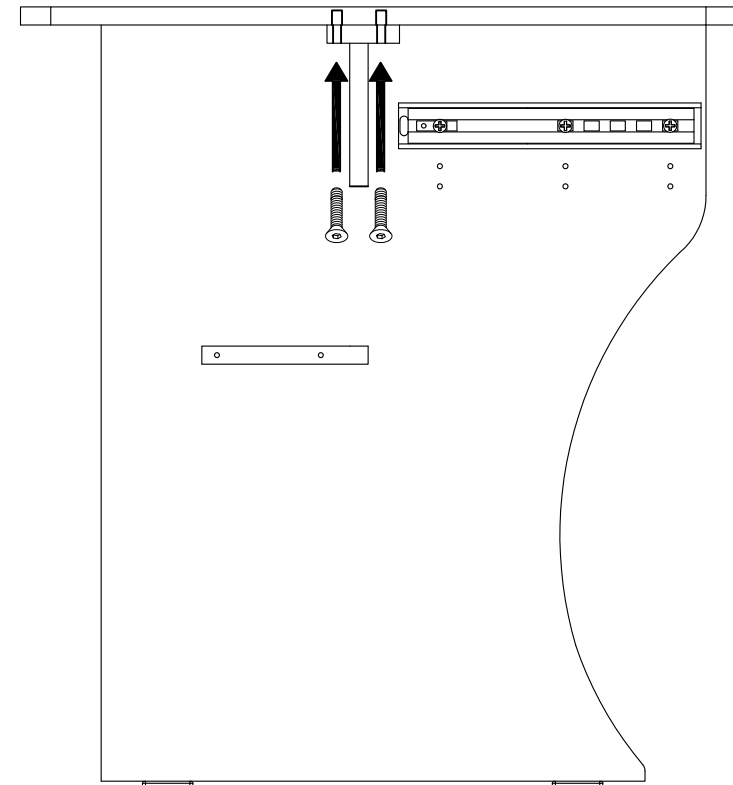


STEP 10

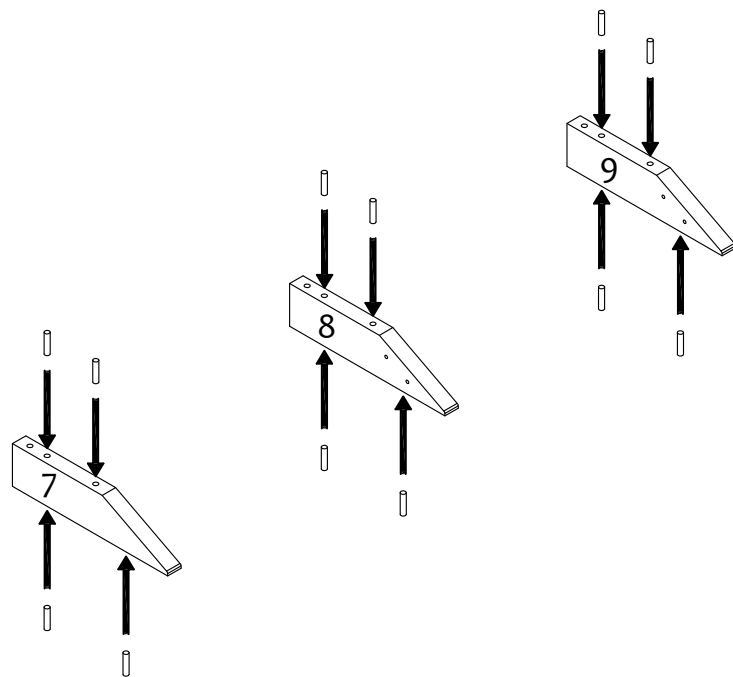

STEP 11

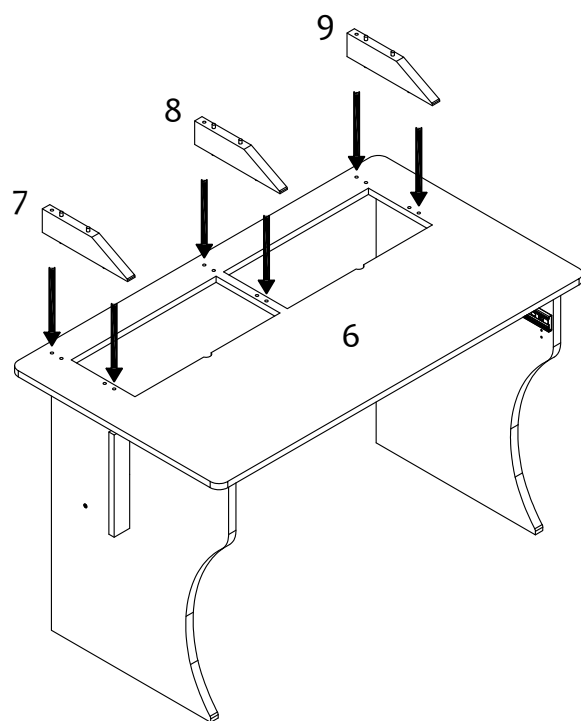


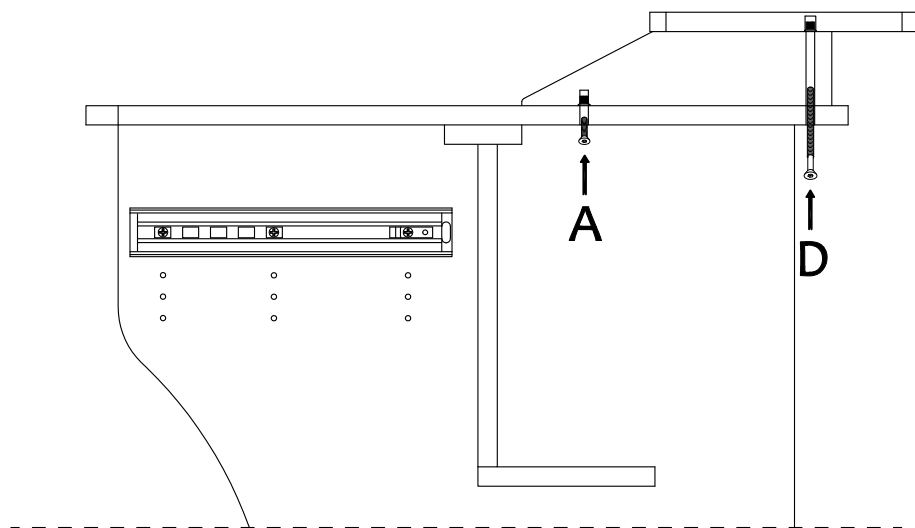
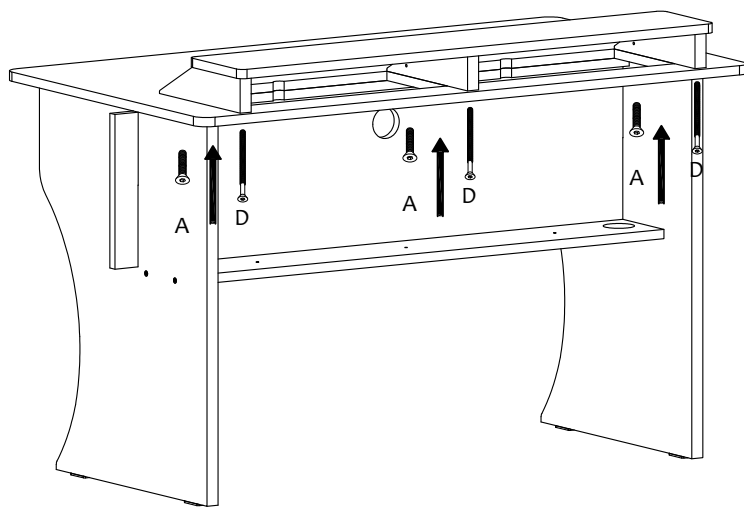
STEP 12

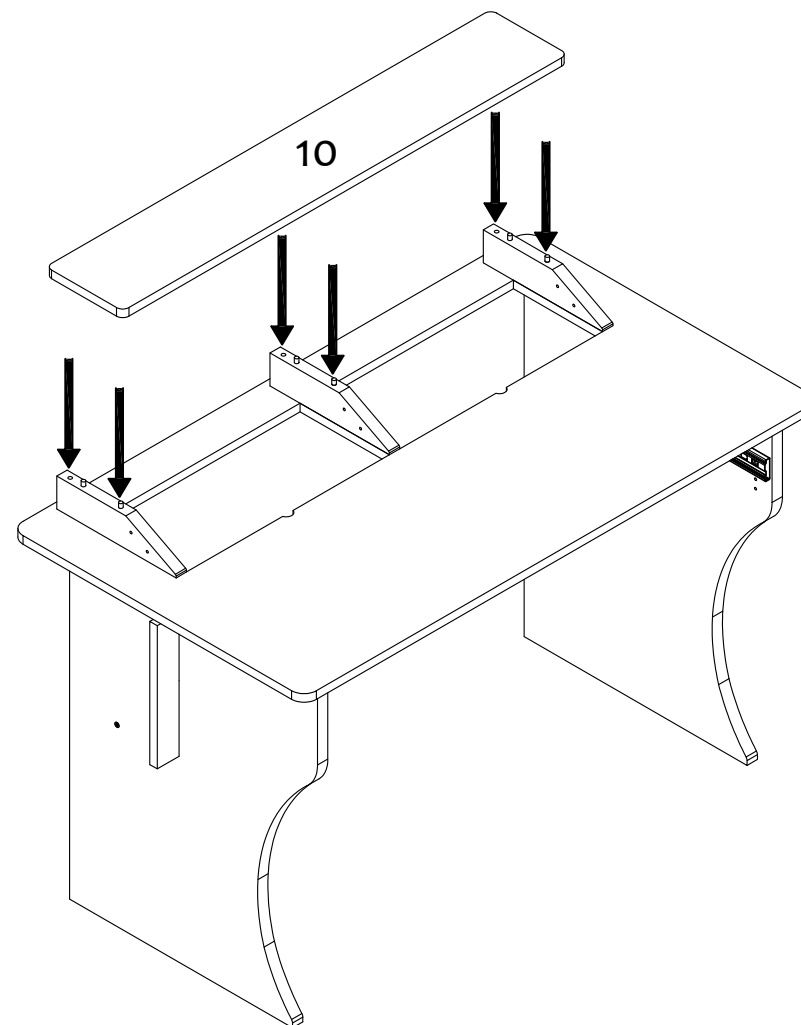


STEP 13

Use screws Type A (x3) 


Use screws Type D (x3) 




STEP 14


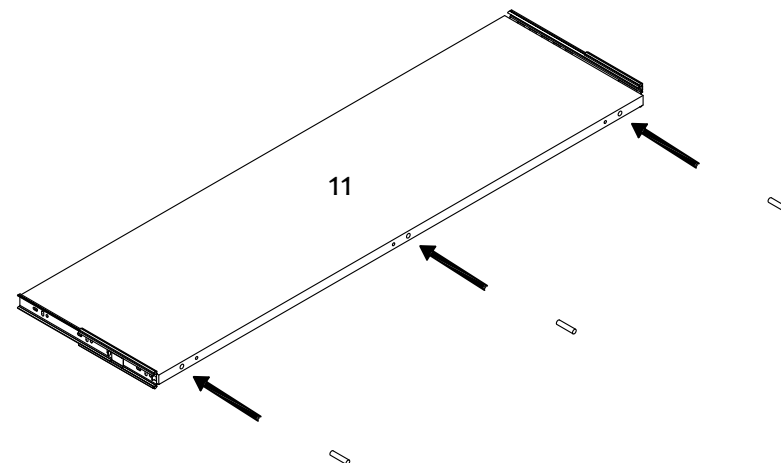


STEP 15



Use screws Type E 

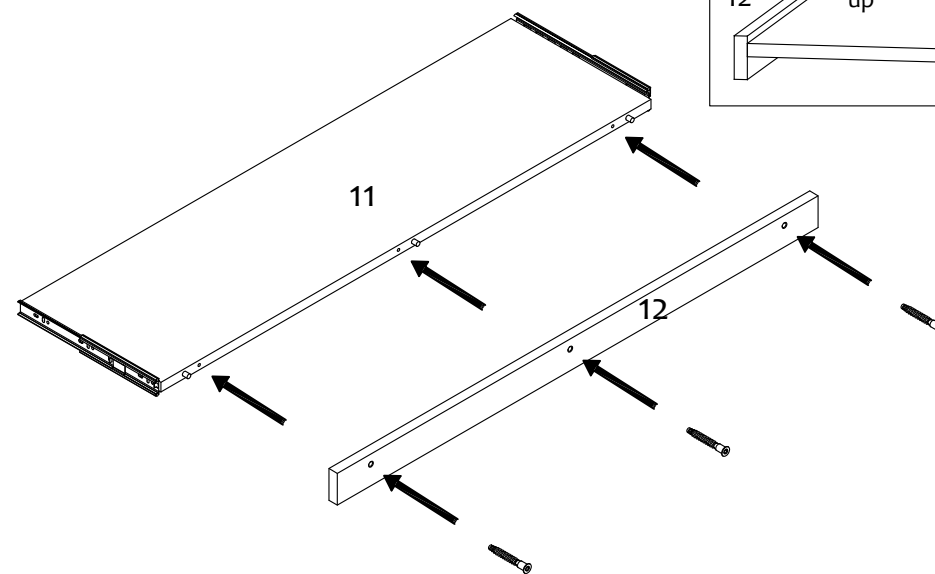


STEP 16

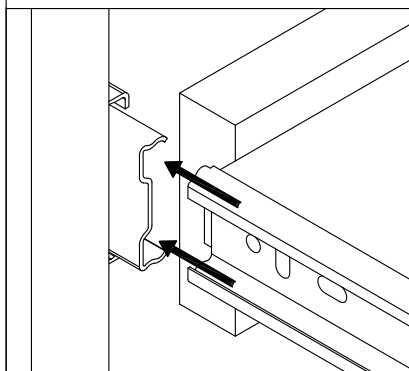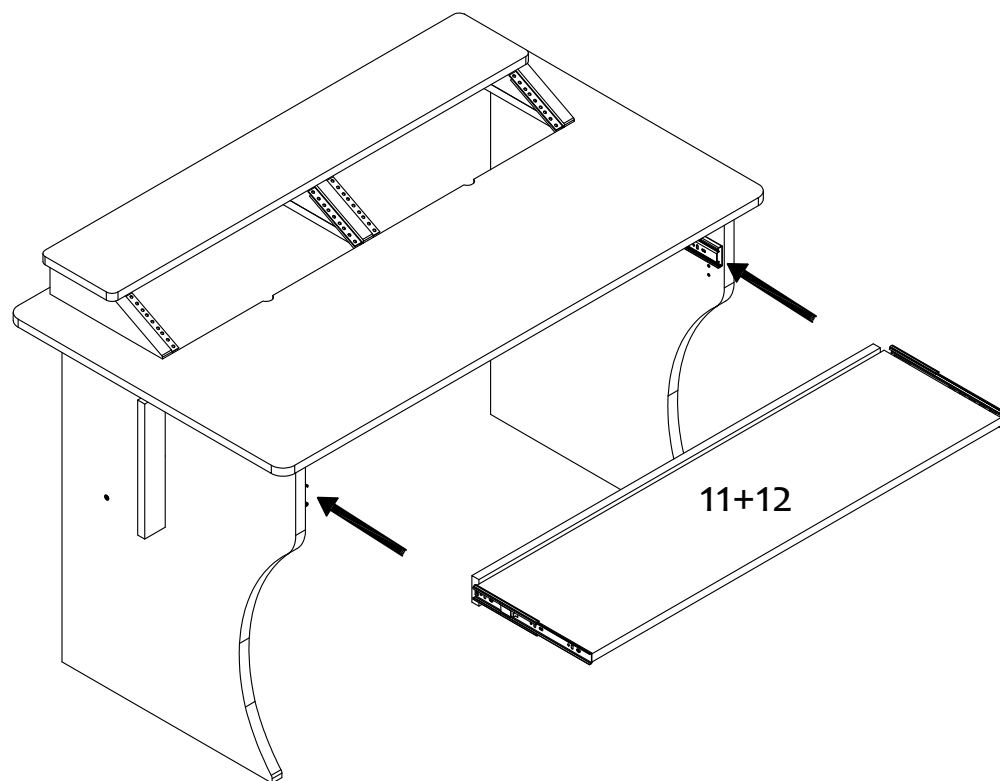


STEP 17






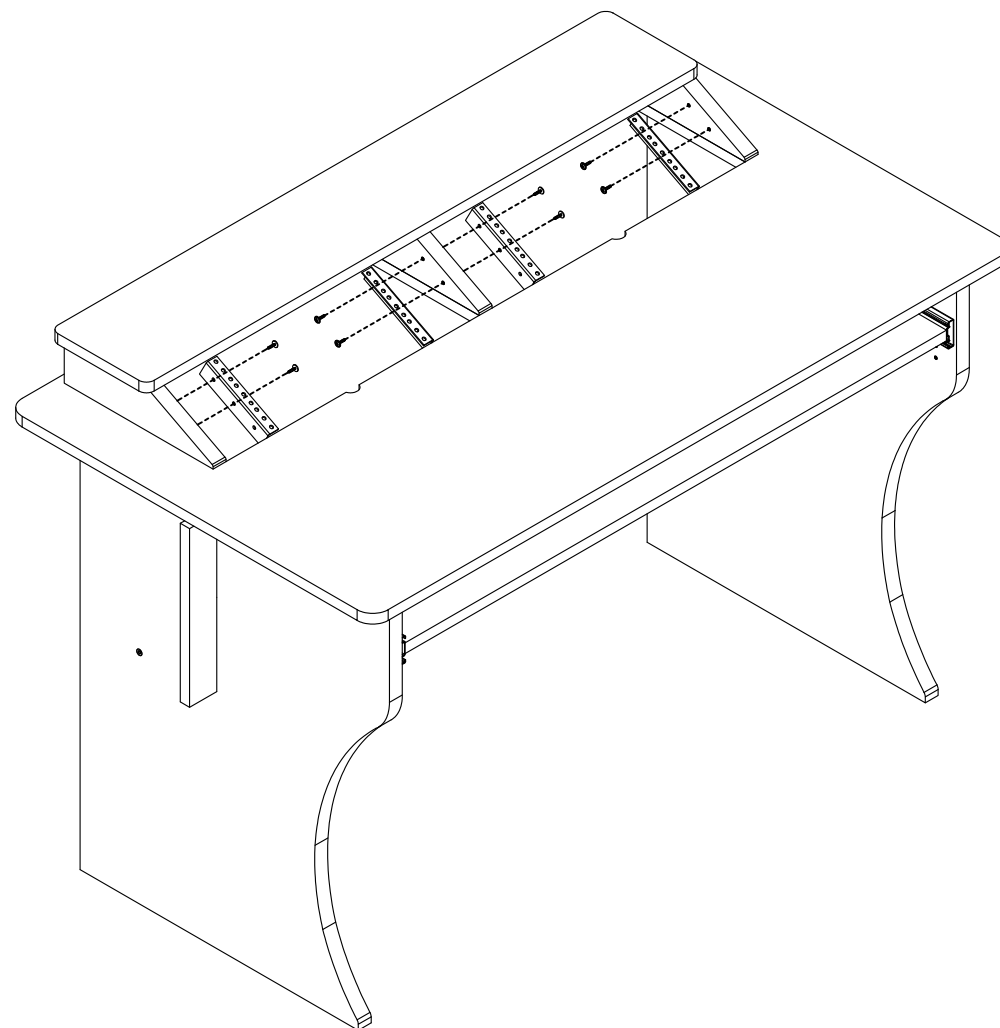






Fix Rack Rail  with screws Type RS 

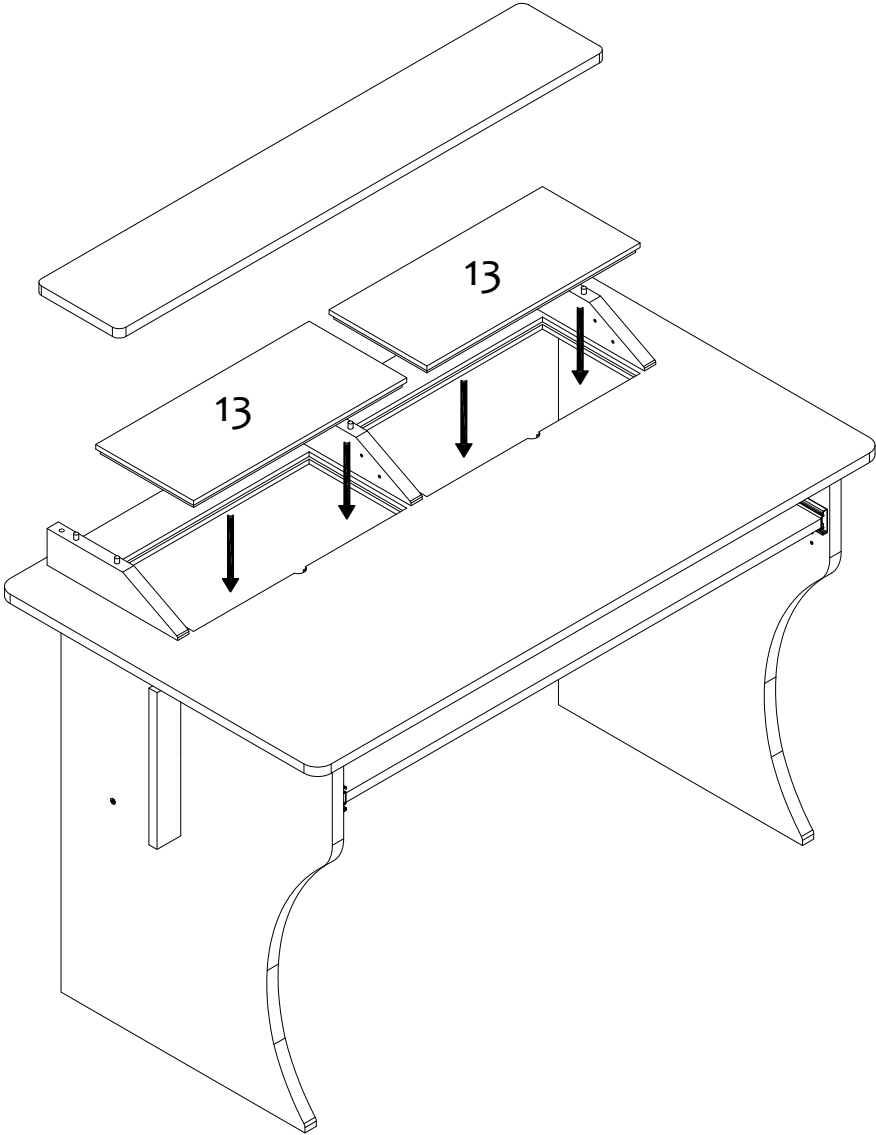


If you don't need the rack units don't fix the rack rails and use the pieces number 13 to close the holes




PACKING LIST:

<div><div>x27</div><div>Type W</div><div></div><div>Wooden dowels</div></div>	<div><div>x17</div><div>Type E</div><div></div><div>Euro Screws</div></div>	<div><div>x9</div><div>Type A</div><div></div><div>m6x30 mm</div></div>	<div><div>x3</div><div>Type D</div><div></div><div>m6x100 mm</div></div>
<div><div>x24</div><div>Type I</div><div></div><div>Plastic insert</div></div>	<div><div>x4</div><div>Type R</div><div></div><div>Rack rail</div></div>	<div><div>x8</div><div>Type Rs</div><div></div><div>Rack rail screws</div></div>	<div><div>x24</div><div>Type Ru</div><div></div><div>Rack units screws</div></div>
<div><div>x6</div><div>Type S</div><div></div><div>3.5x20 mm</div></div>	<div><div>x4</div><div>Type F</div><div></div><div>Plastic foot</div></div>	<div><div>x1</div><div>Type H</div><div></div><div>Hex wrench</div></div>	<div><div>x2</div><div>Type Sl</div><div></div><div>Slider</div></div>


TOOLS:

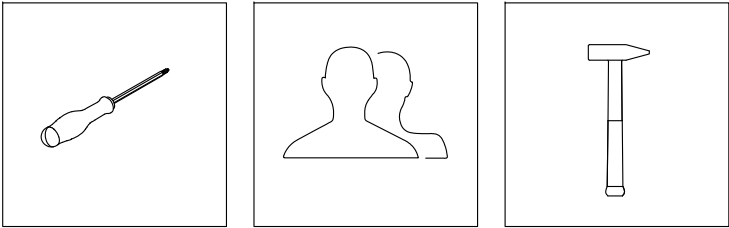



ComboDesk

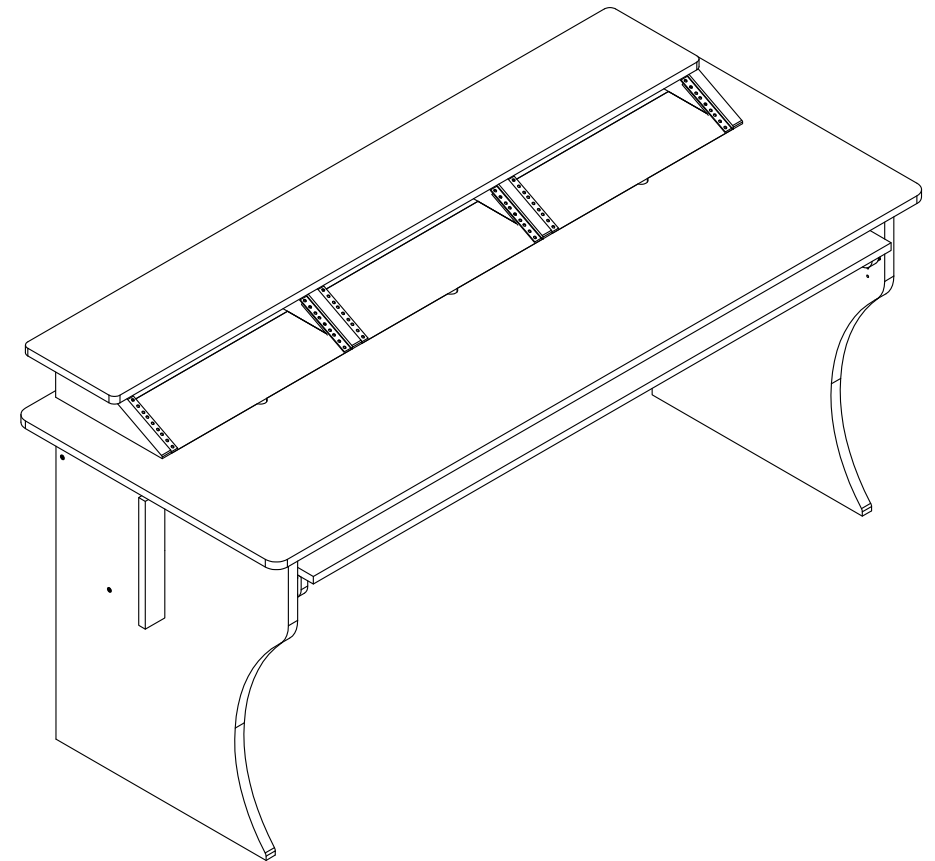

Combo 88 Desk Assembly Manual

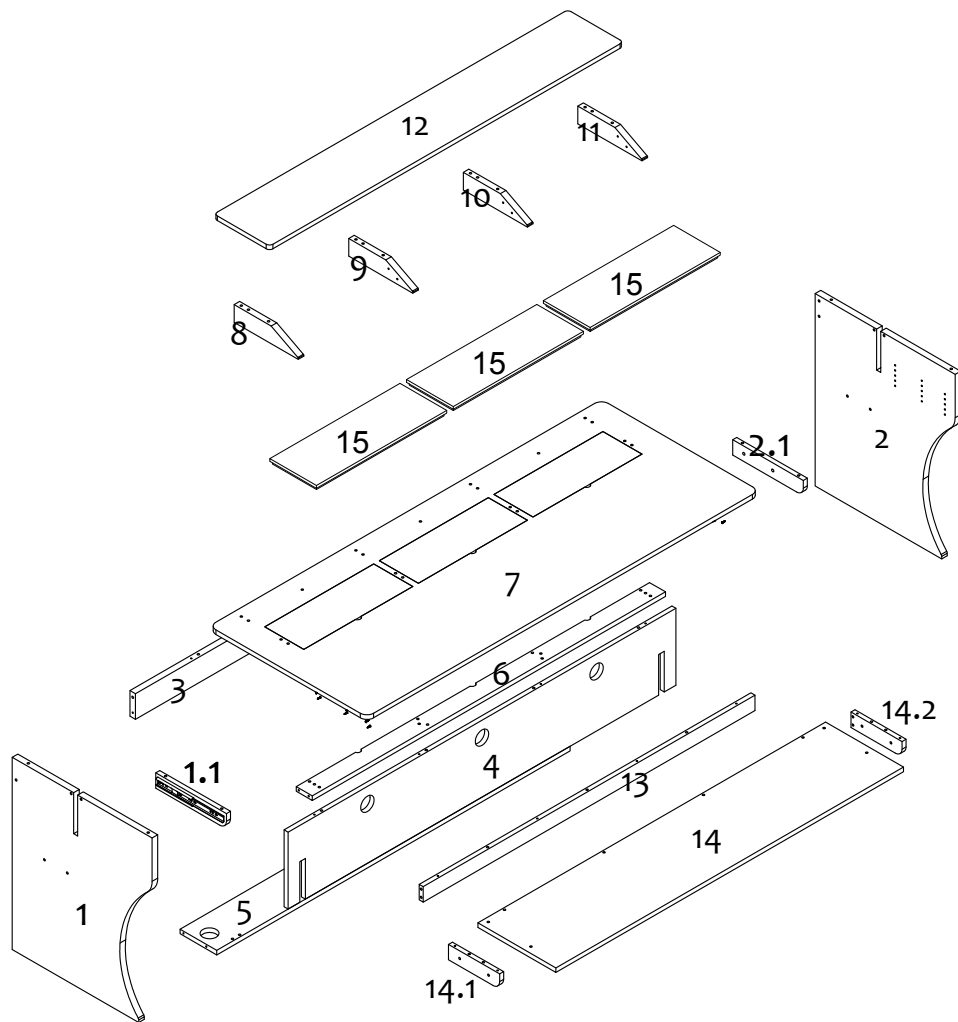


For reasons of safety and stability, parts number 7, 12 and 15 (3 pieces) are assembled during transport. Before you start building your Combo desk88 , turn part #7 with its underside upwards and lay it on the ground. You will see 4 screws (Type A) which hold together the three parts. Remove them and disassemble the parts carefully (keep the screws for later). You are now ready to start building your Combo 88 studio desk.

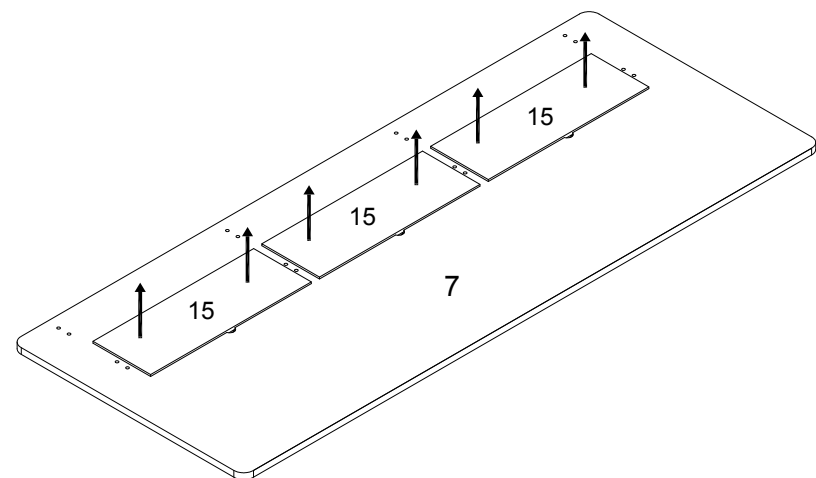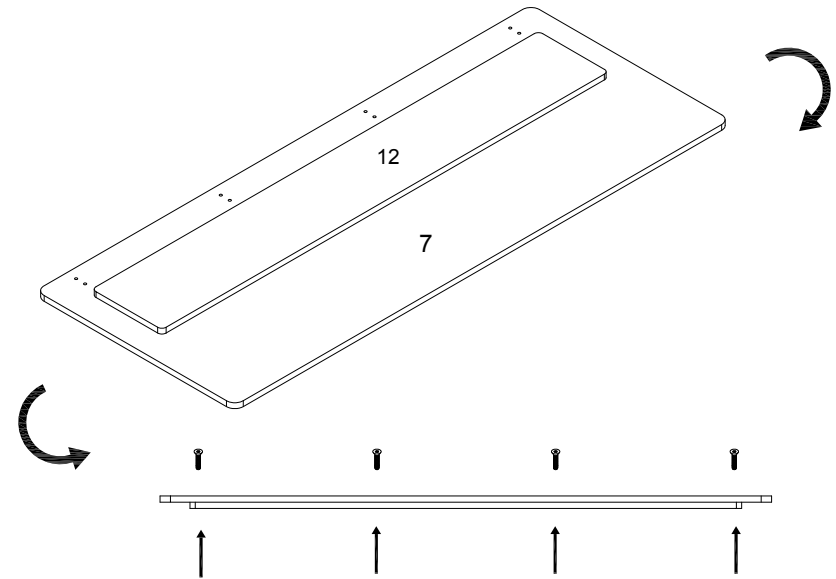



Step 1

A

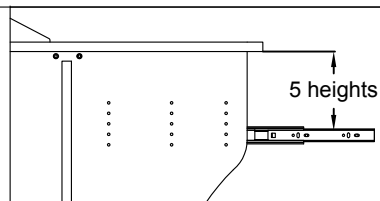


- 1st 57 mm
- 2nd 77 mm
- 3rd 97 mm
- 4th 117 mm
- 5th 137 mm


B

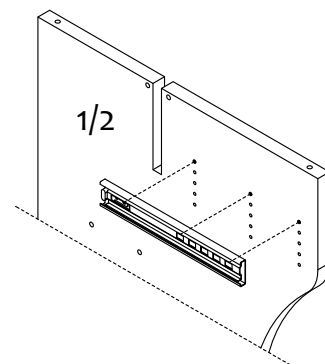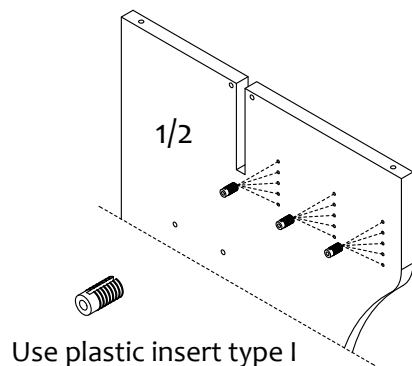

C Use screws Type S

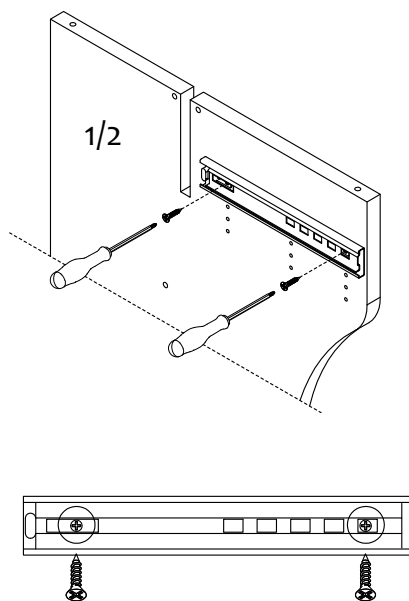


D Use screws Type S

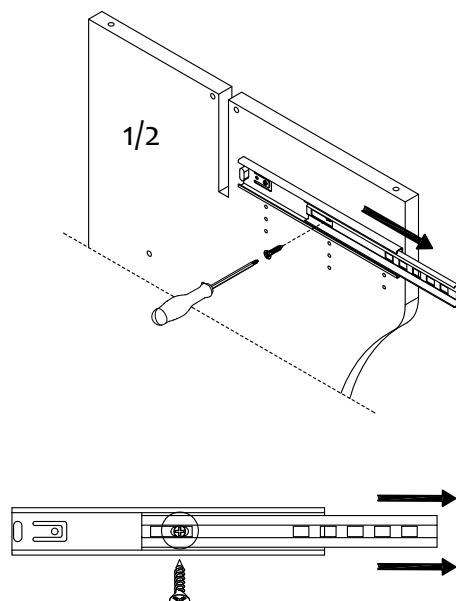


STEP 2

Push wooden dowels Type W in the appropriate holes

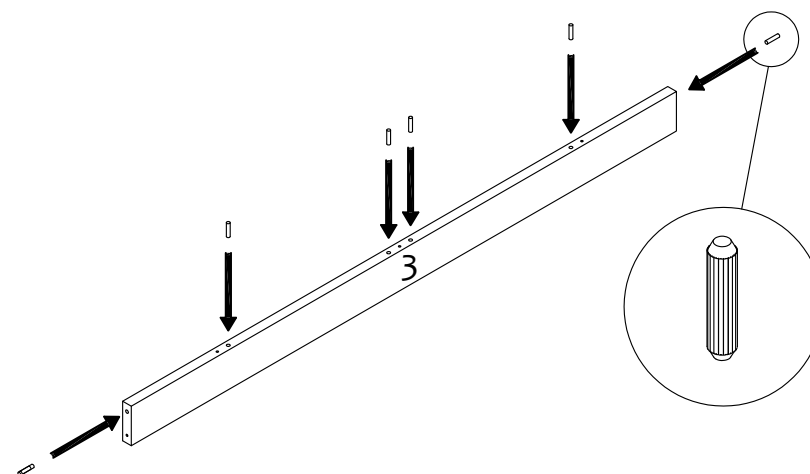


STEP 3

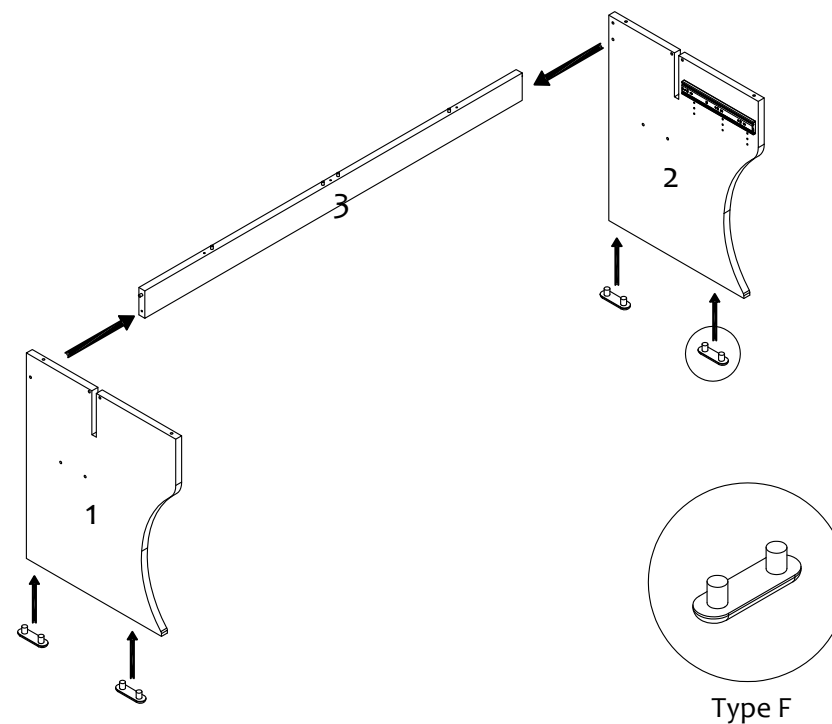


STEP 4


Use screws Type E

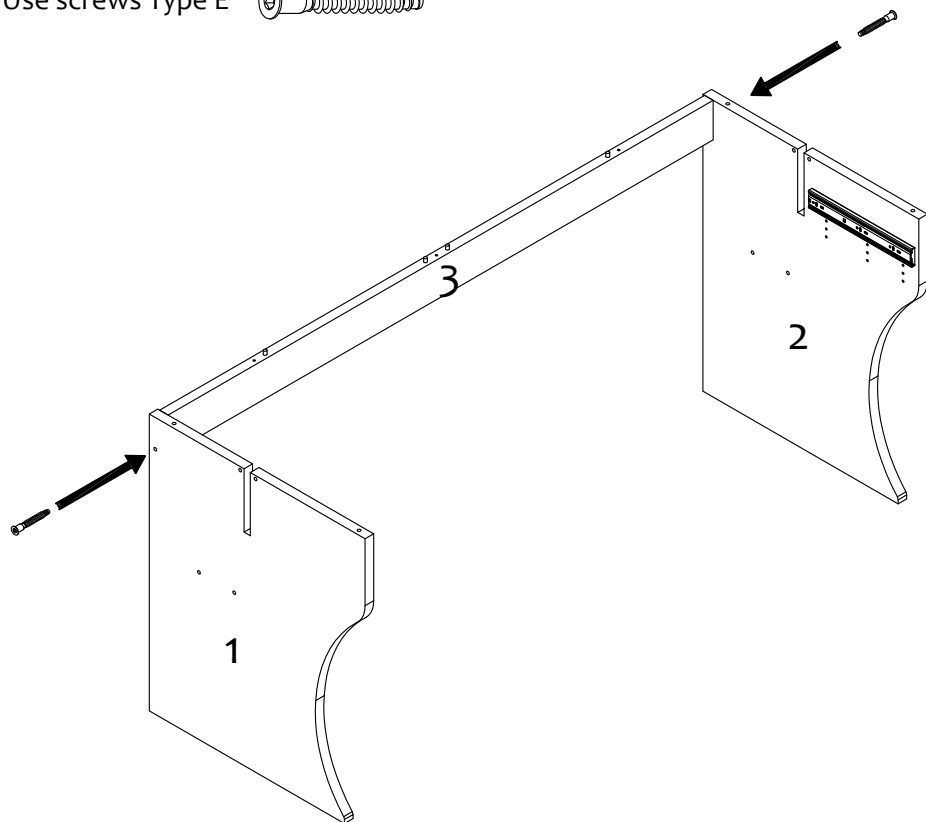


Use hex wrench to screw

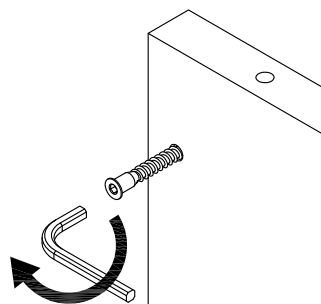


Tighten the screw until it is even with the particle board

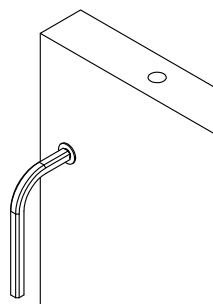


Use screws caps

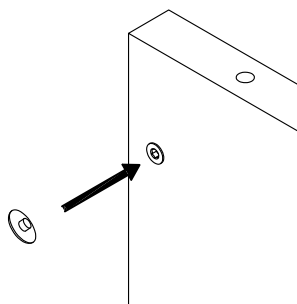


STEP 5

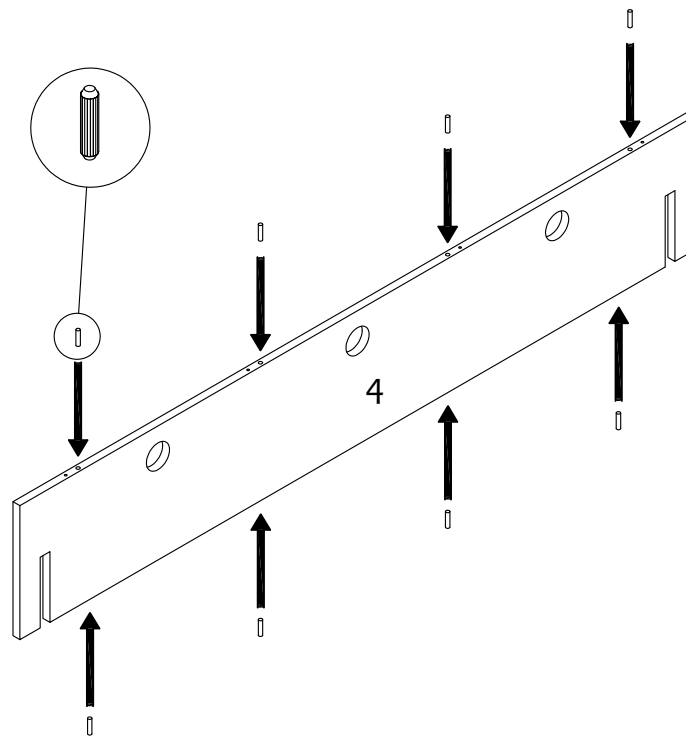


STEP 6

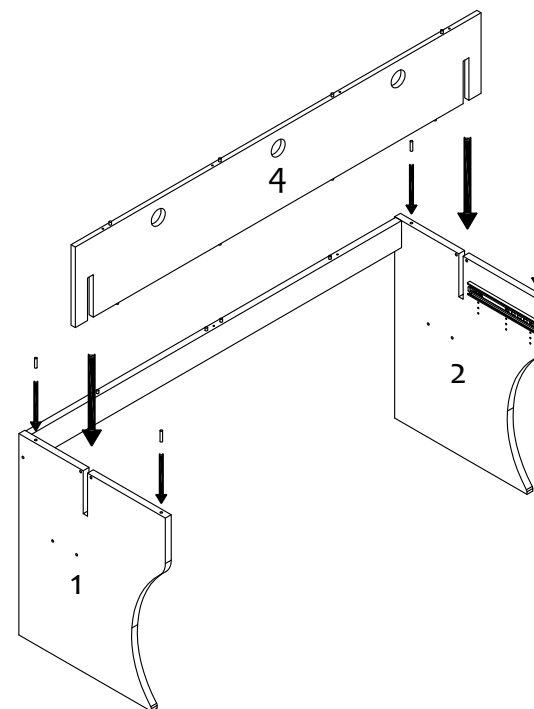


STEP 7

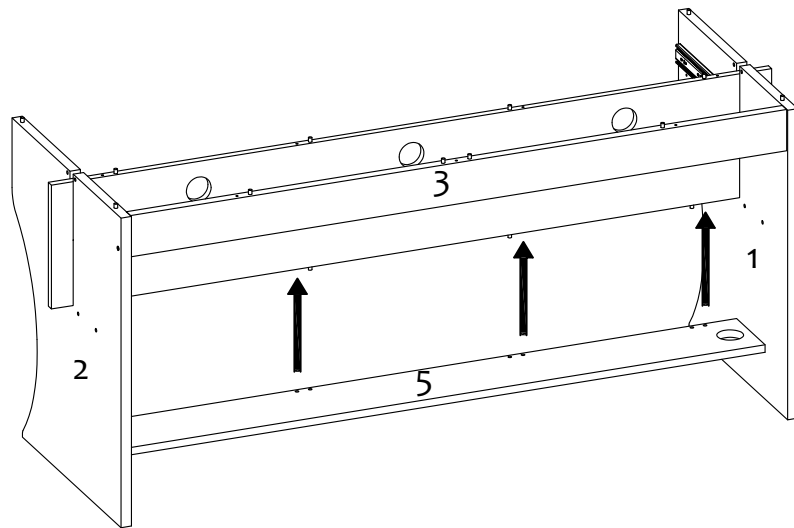


STEP 9

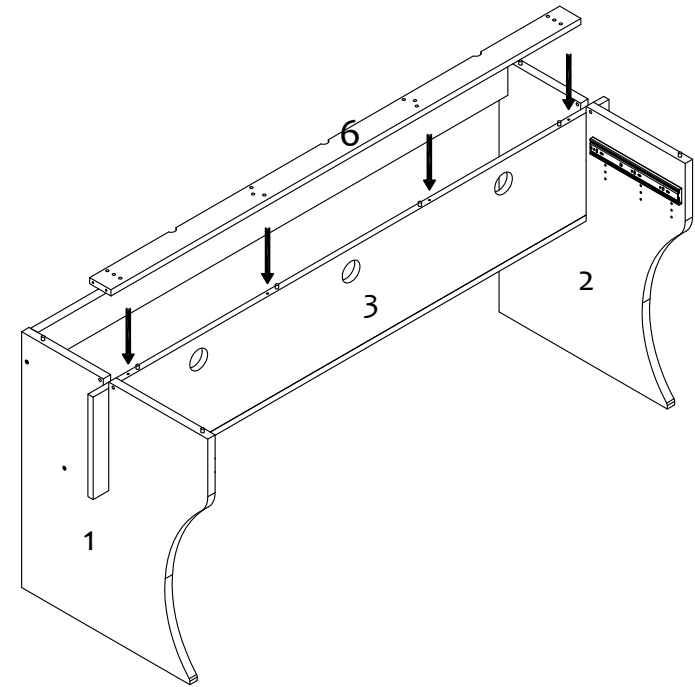


STEP 8

Use screws Type E 

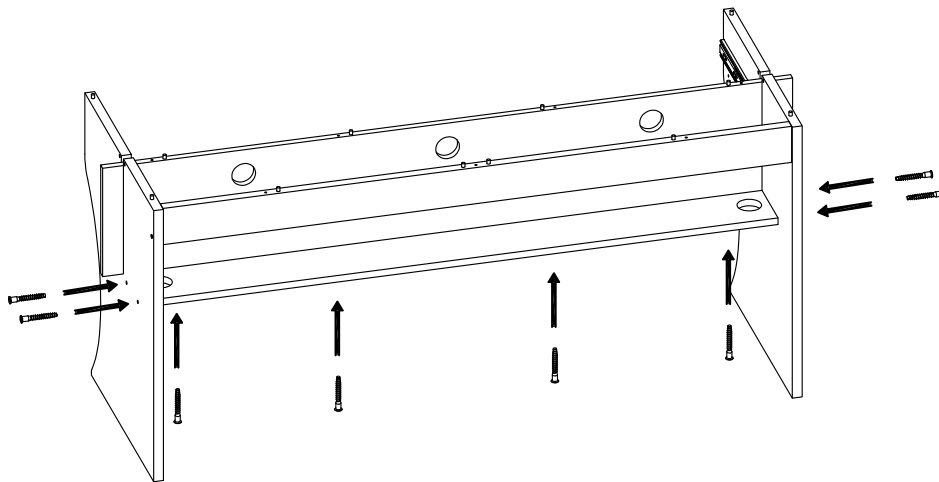


STEP 10

Use screws Type E 

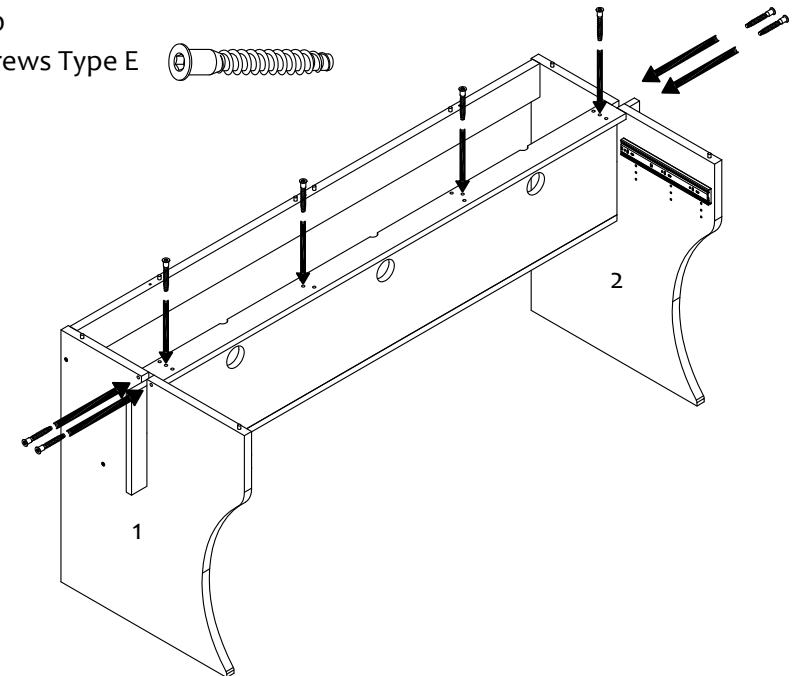


STEP 11

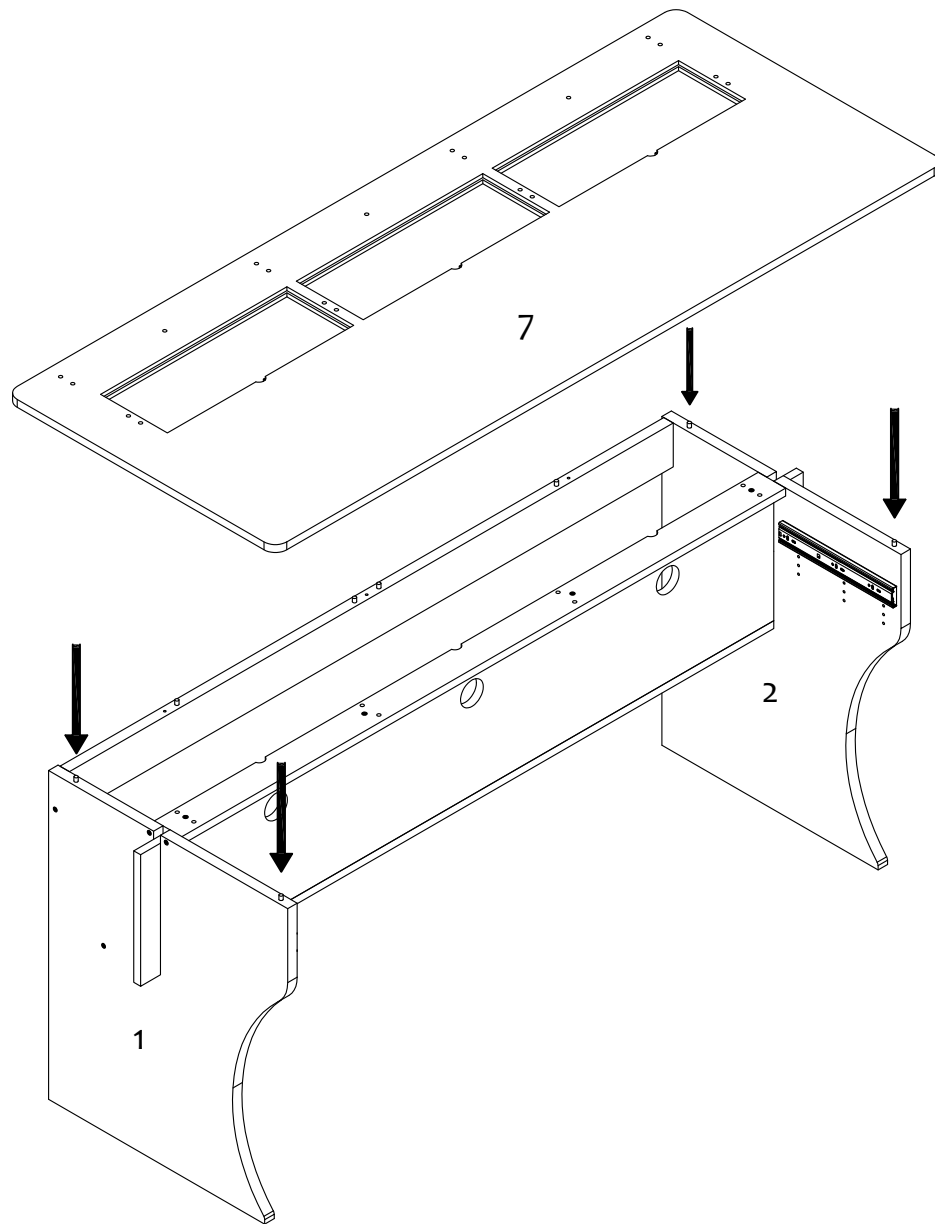


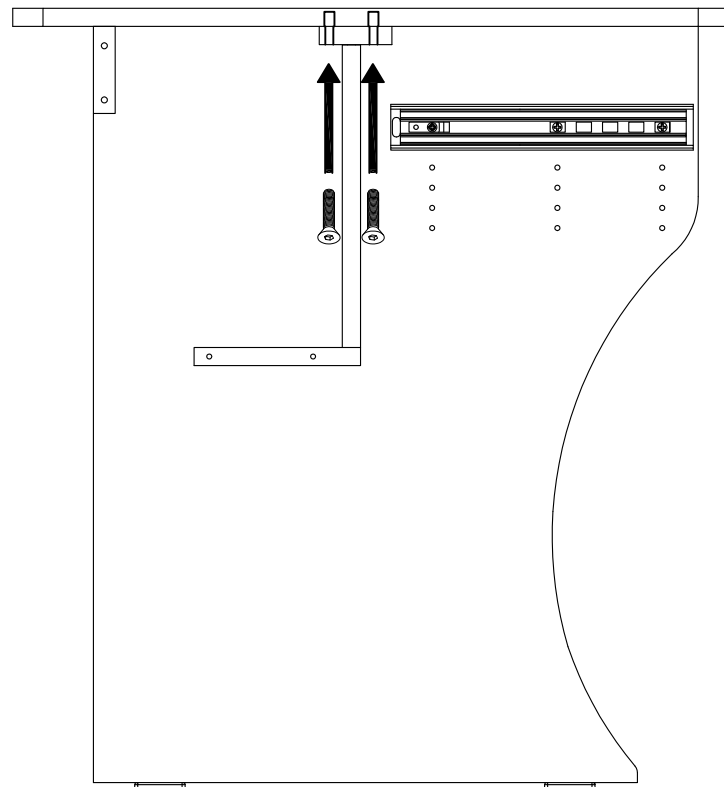
STEP 12

Use screws Type E

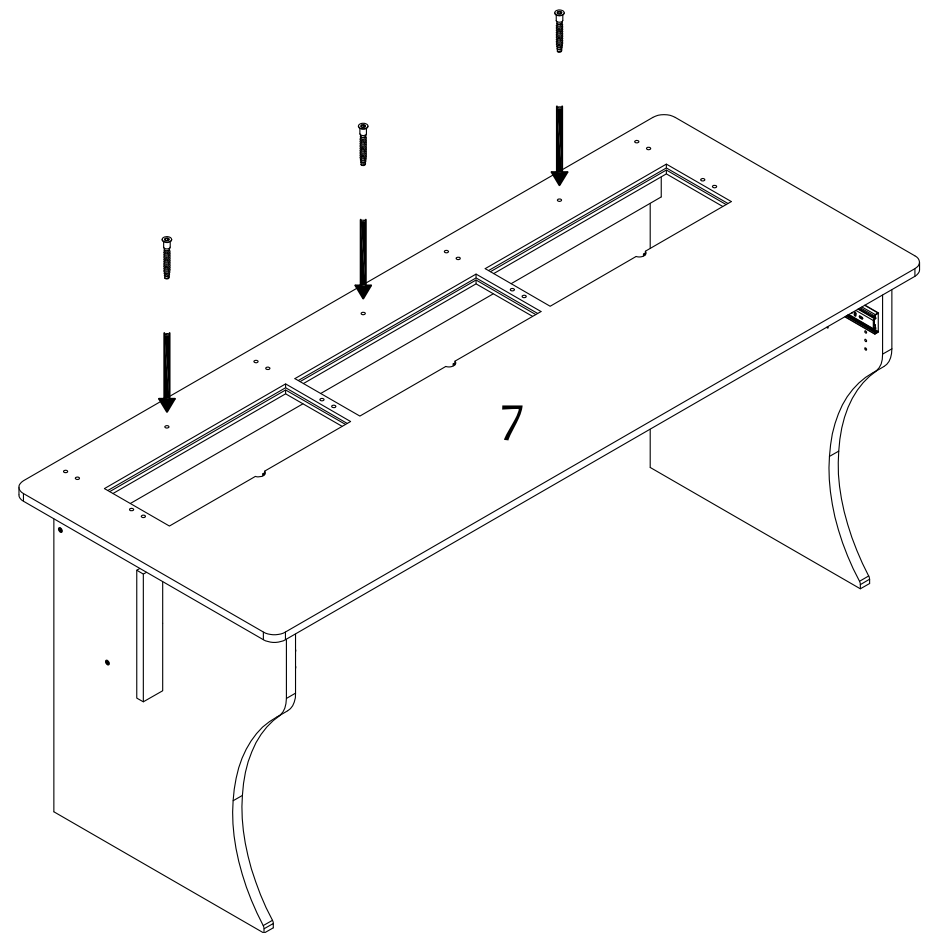


STEP 13


Use screws Type A (x8) 




STEP 14

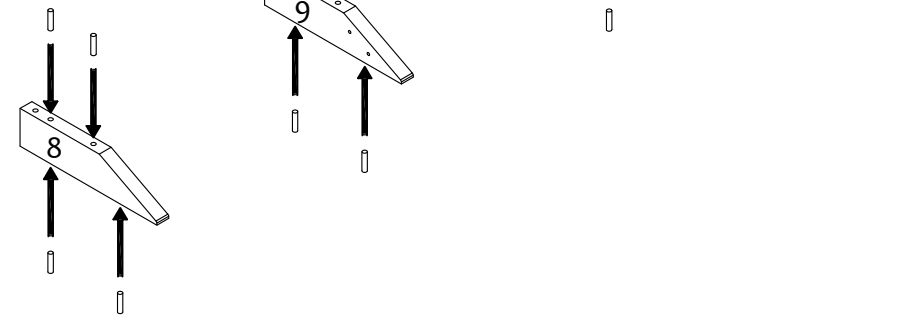


STEP 15

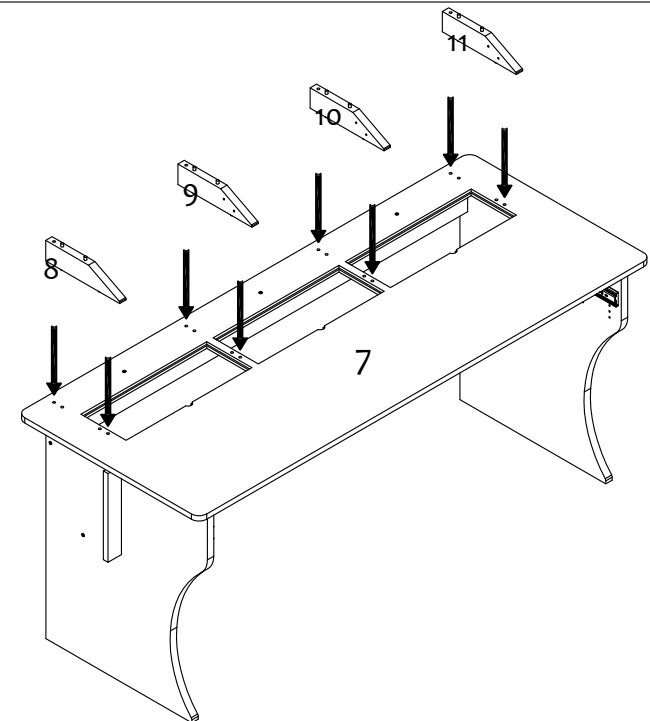


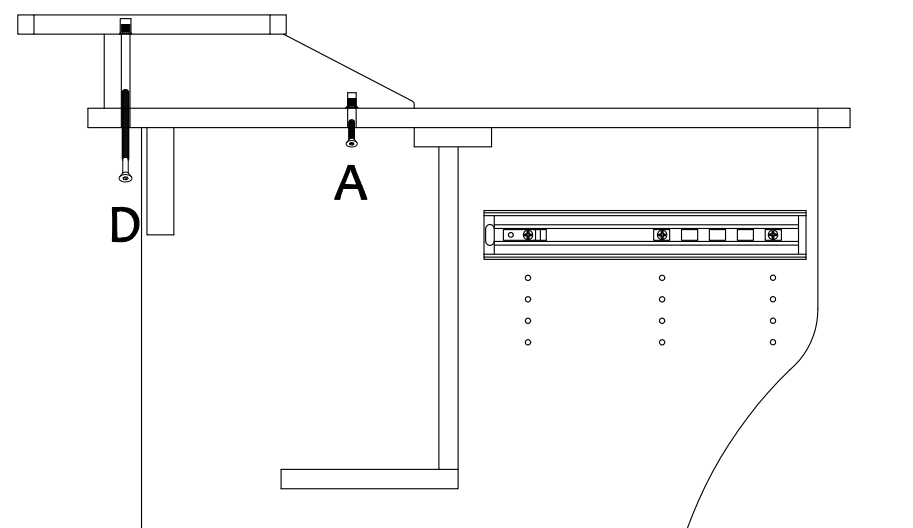
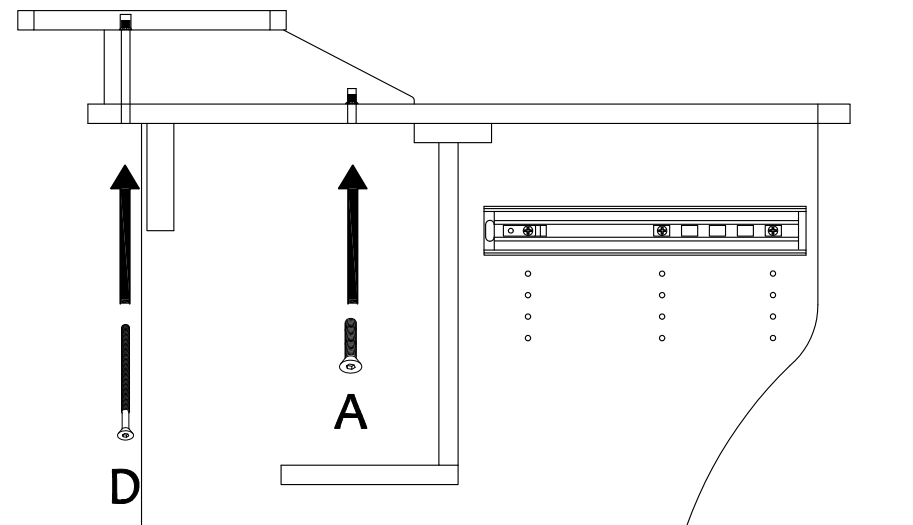
STEP 16

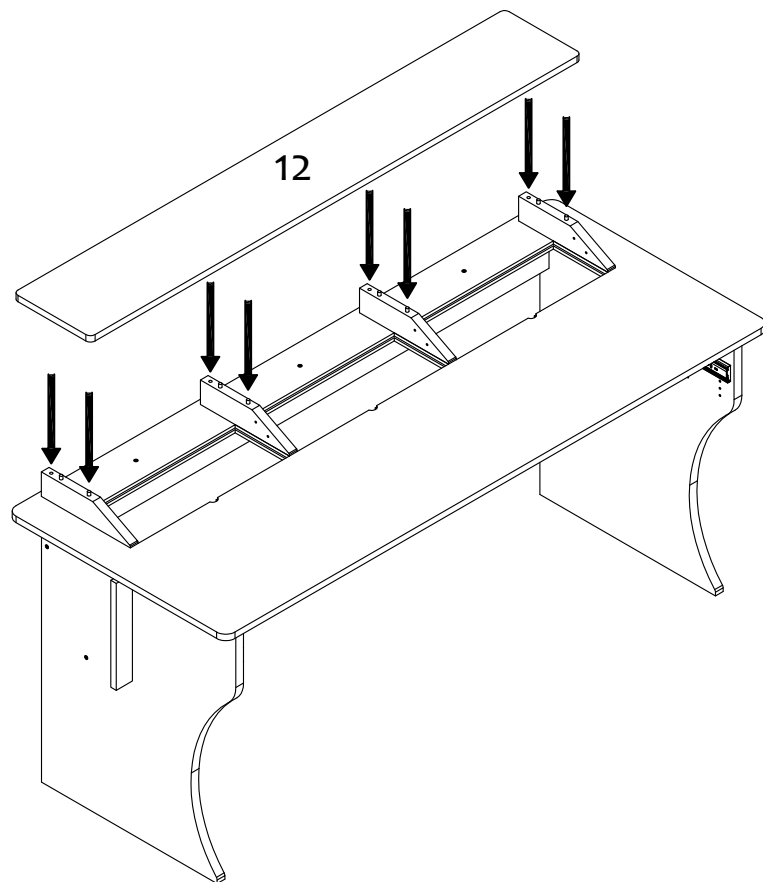


STEP 17

Use screws Type A M6x30mm (x4) 


Use screws Type D m6x100mm (x4) 




STEP 18

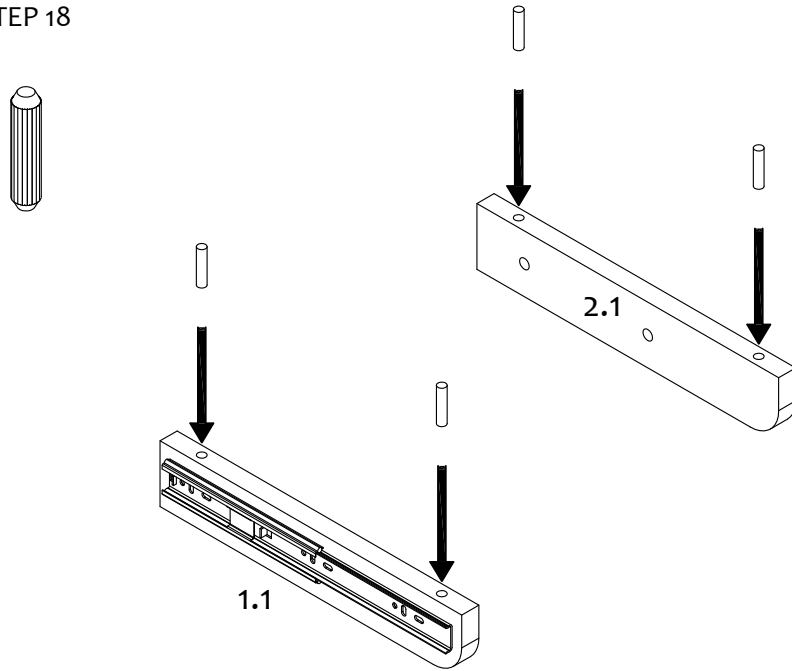


STEP 20

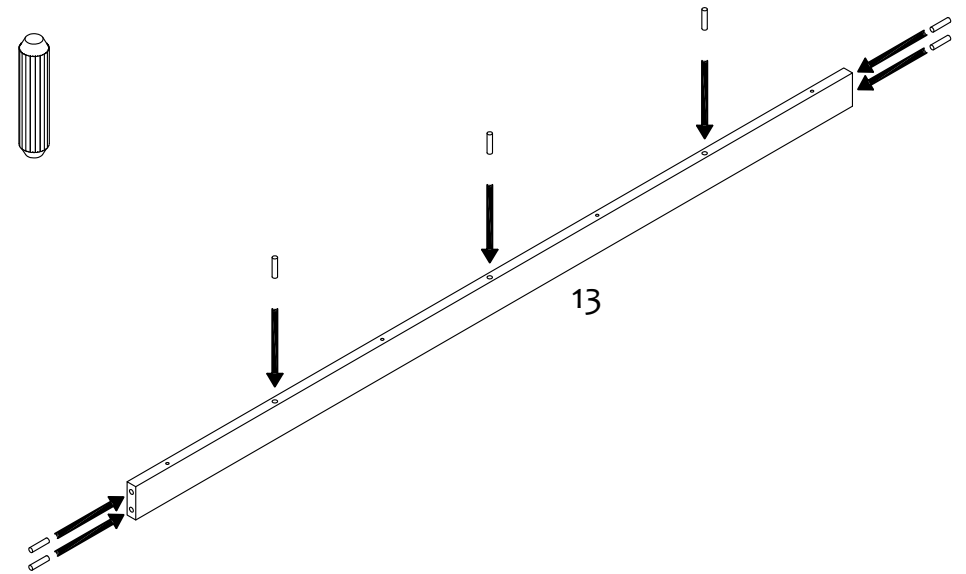


STEP 19

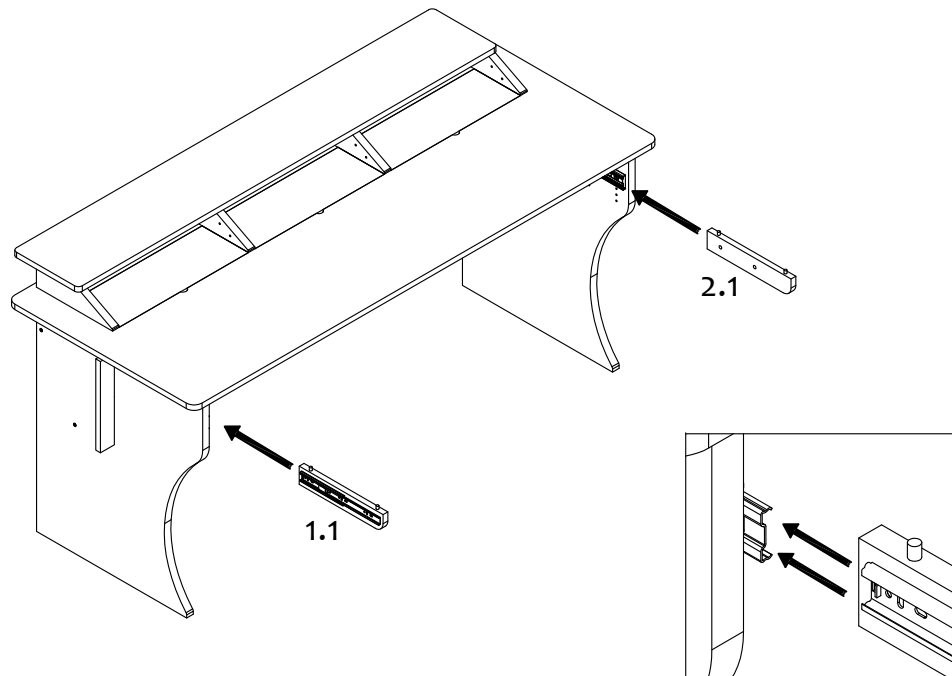

STEP 21

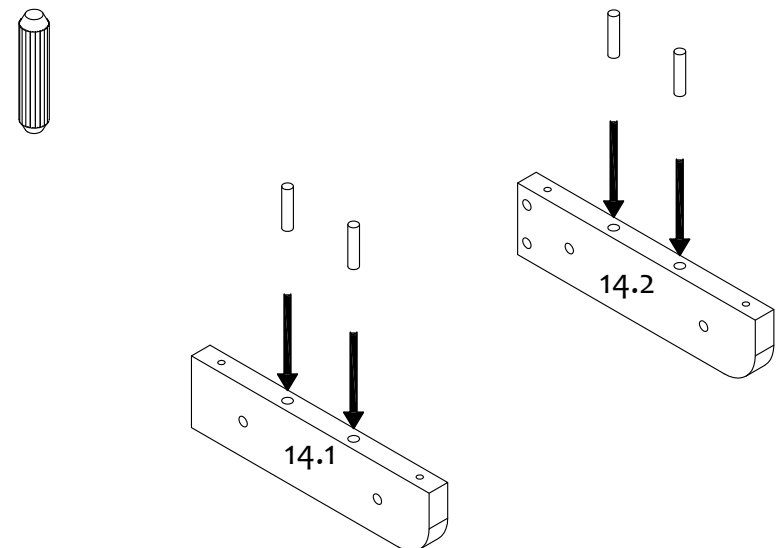


STEP 22

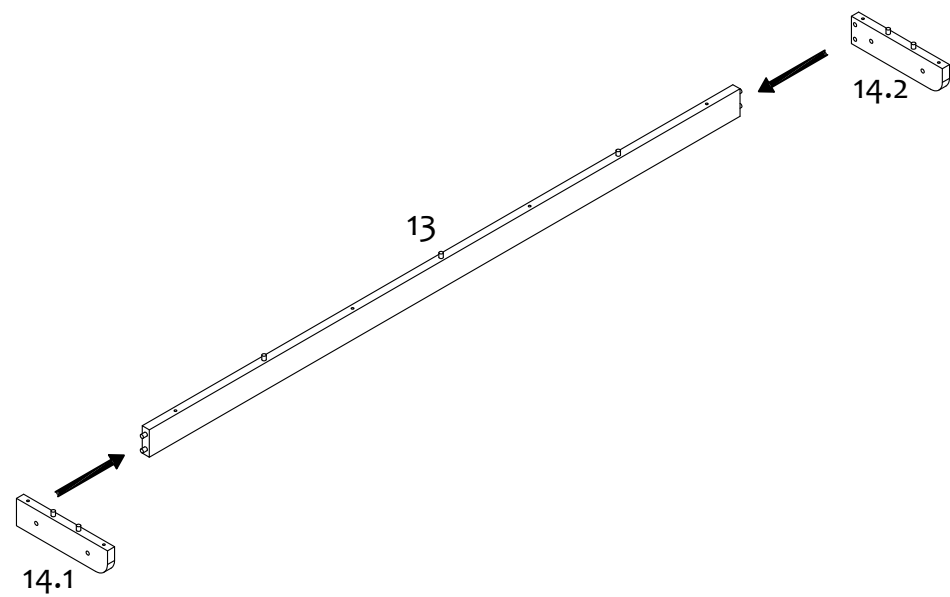


STEP 24


Use screws Type E

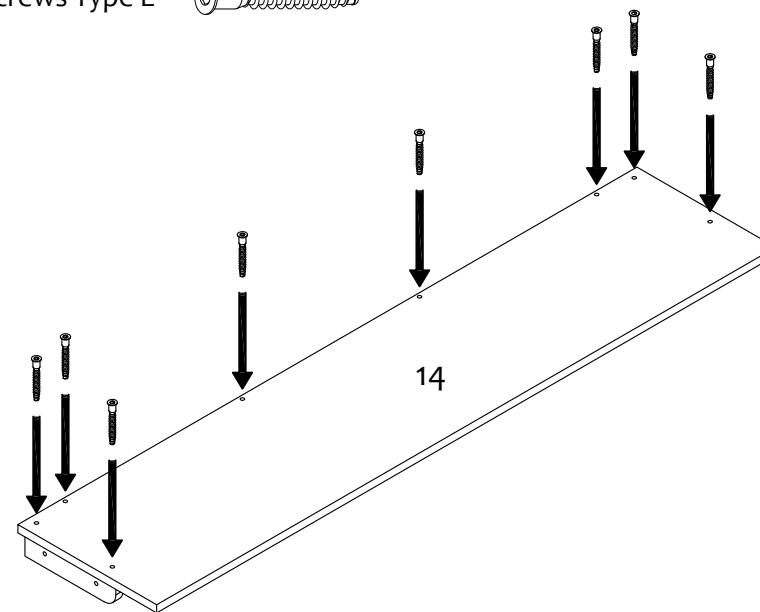

STEP 23


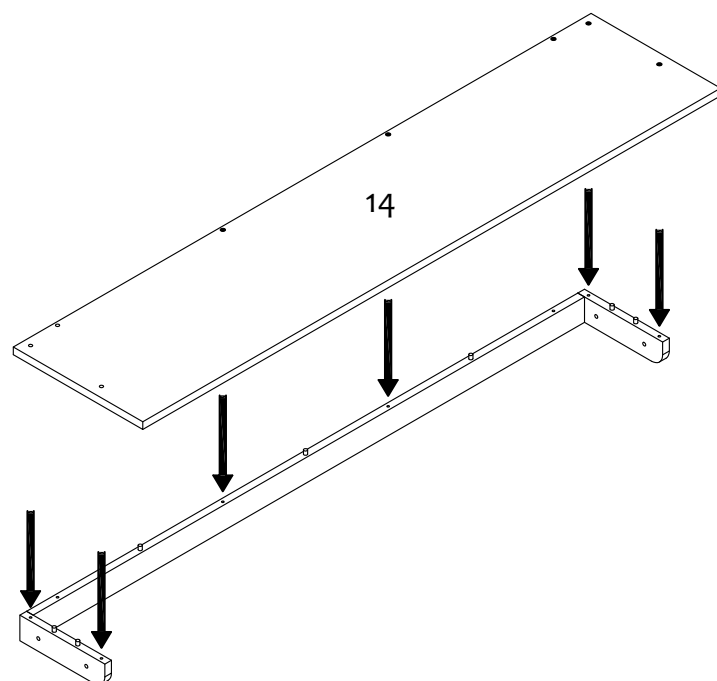


STEP 25

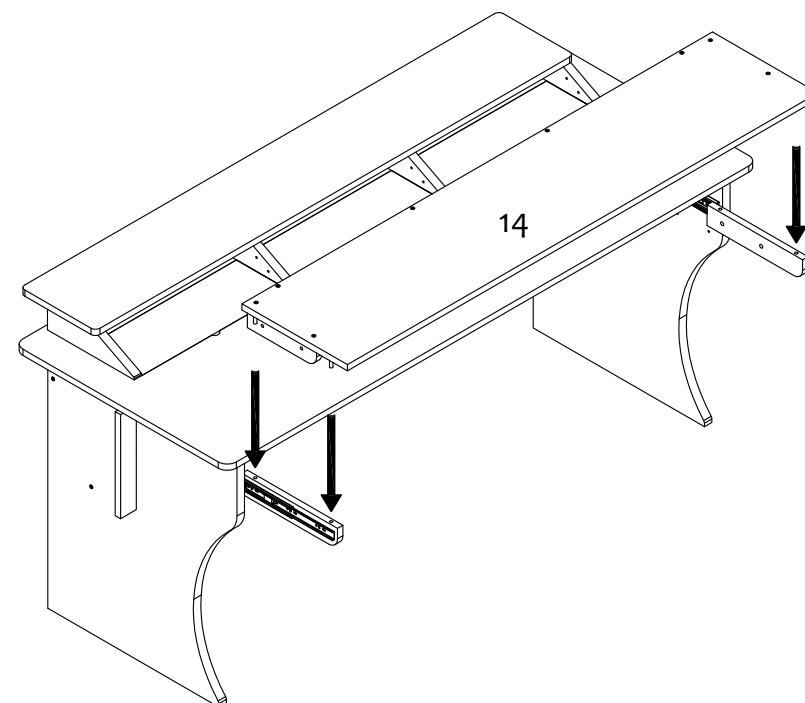


STEP 26

Use screws Type A (x4) 

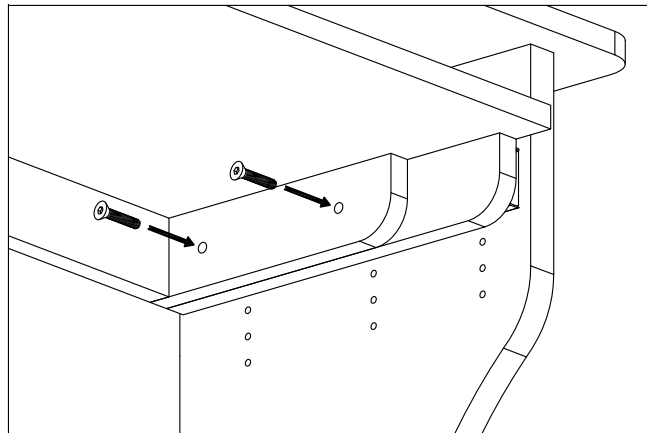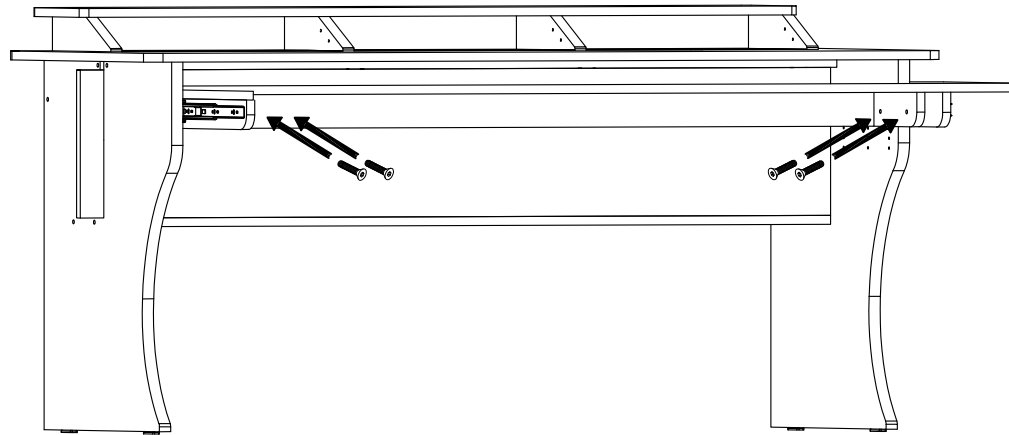


STEP 27













Fix Rack rail with screws Type RS 

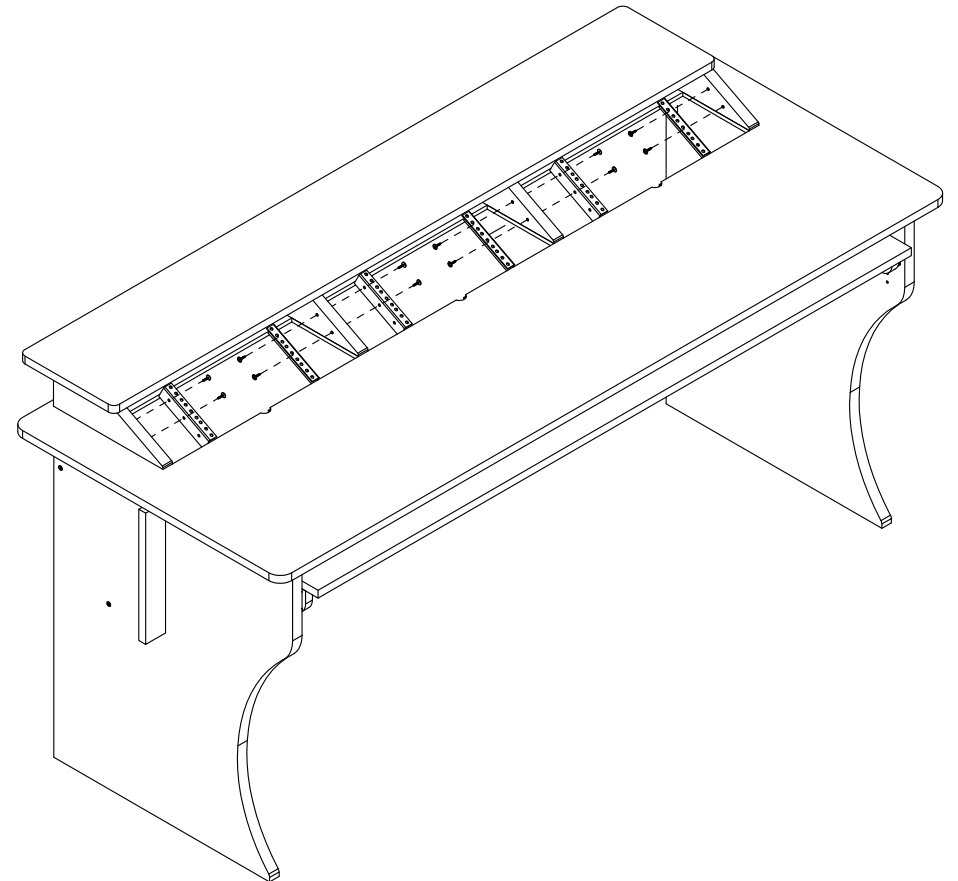

If you don't need the rack units don't fix the rack rails and use the pieces number 15 to close the holes

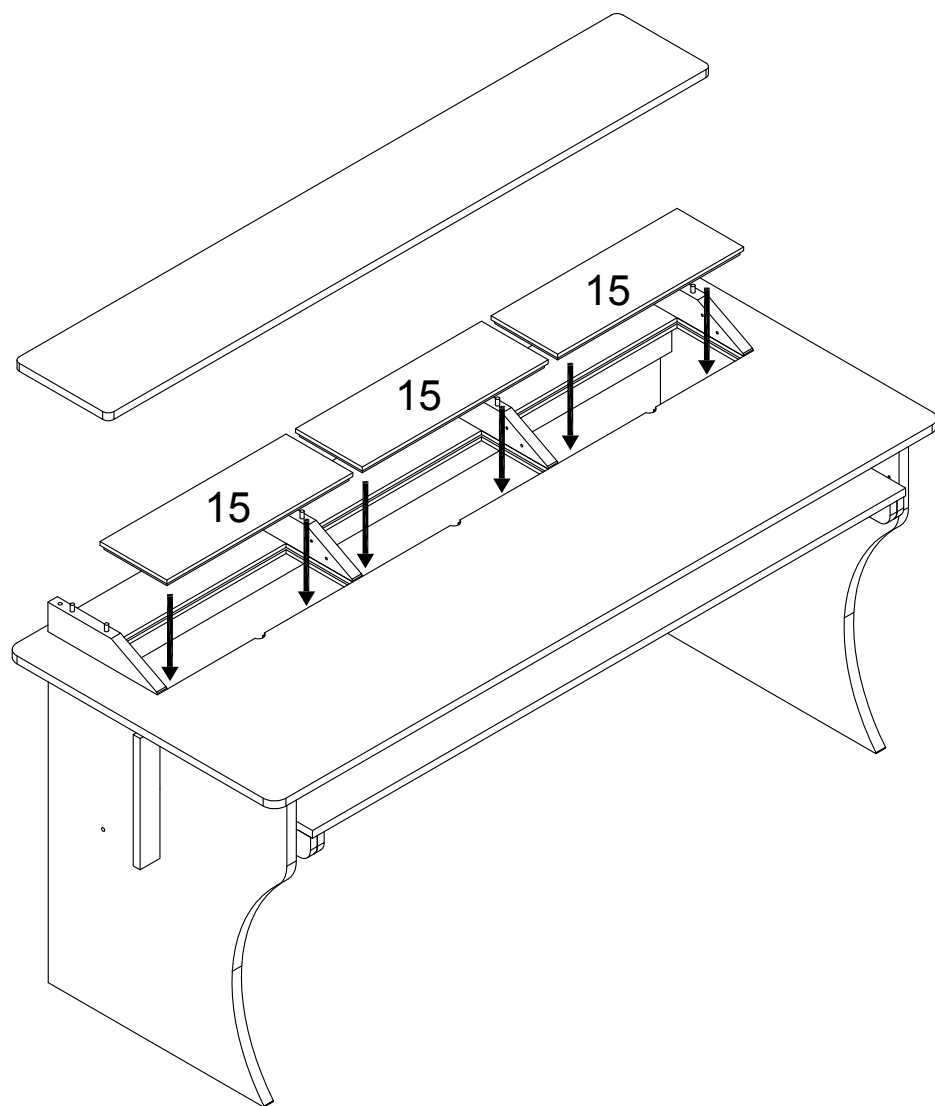

PACKING LIST:

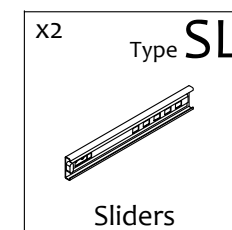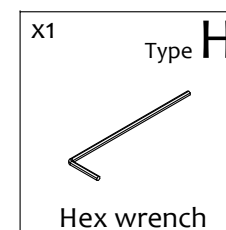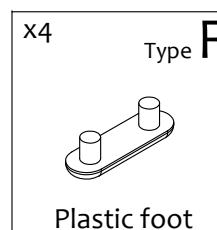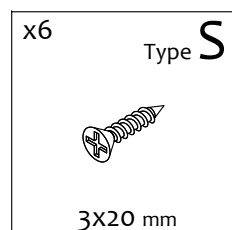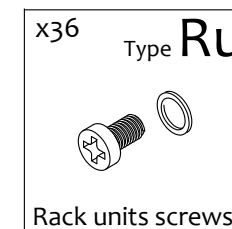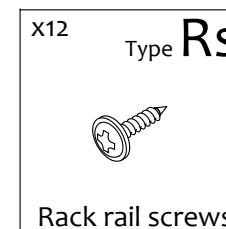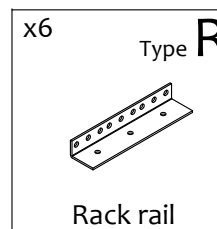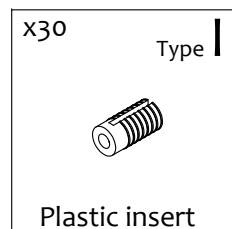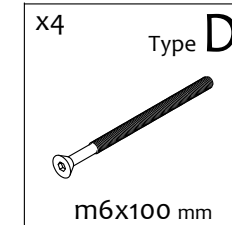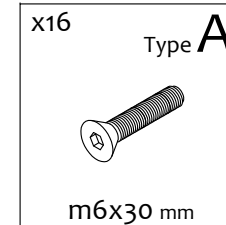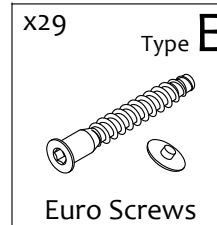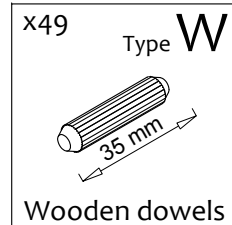

TOOLS:

